

REMINGTON ErP Data Sheet				
Column A	Column B	Column C	Column D	Column E
Model	Model name	Mode	Power Consumption (W)	Remarks
MB09A	Trimmer	Off	0.1	
PG05A	Personal Groomer	Off	0.1	
PG13A	Personal Groomer	Off	0.0	
RG019A	Personal Groomer	Off	0.3	
WPG4030,WPG403SXYZ	Personal Groomer	Off	0.1	
R17A	Shaver	Off	0.1	
	Shaver	Off	0.1	
R17A, R17B USB version	Shaver	\	\	Charging via USB cable only
R09A, R10A	Shaver	Off	0.4	
XR1400, XR1410, R16A, XR140WSYZ, XR141WSYZ	Electric Shaver	Off	0.1	
PF7200, PF720WXYZ	Electric Shaver	Off	0.4	
CI1019, CI101WXYZ	Curling iron	Off	0.0	
CI6325	Curling iron	Standby	0.5	
CI27A	Curling iron	Off	0.3	
	Curling iron	Auto-Off	0.3	
CI19A		Off	0.5	
	Curling iron	Auto-Off	0.4	
		The appliance operated approximately 60min and turned into "Off"		
CI30A		Off	0.2	
	Multi Styler	Auto-Off	0.2	
		The appliance operated approximately 60min and turned into "Off"		
S31A		Off	0.4	
	Straightener	Auto-Off	0.4	
		The appliance operated approximately 60min and turned into "Off"		
S33A	Straightener	Off	0.3	
S38A		Off	0.2	
	Straightener	Auto-Off	0.2	
		The appliance operated approximately 60min and turned into "Off"		
S3500	Straightener	Off	0.2	
S-3500, CS-1500, S3500, CS1500, S-350WXYZ, CS-150WXYZ, S350WXYZ, CS150WXYZ		Off	0.2	
	Straightener	Auto-Off	0.4	
		The appliance operated approximately 60min and turned into "Off"		
S5500, S5520, S6500	Straightener	Standby	0.3	
S7710		Off	0.3	
	Straightener	Auto-Off	0.3	
		The appliance operated approximately 60min and turned into "Off"		
S9500, S9520, S44A, S45A		Standby	0.6	
	Straightener	Auto-standby	0.6	
		the appliance operated approximately 60min and turned into "Standby"		
D23A	Hair dryer	Off	0.1	
D18A	Hair dryer	Off	0.1	
D14A	Hair dryer	Off	0.0	
D1500, D150WXYZ	Hair dryer	Off	0.1	
D11A, D21A	Hair dryer	Off	0.1	
D2400, D240WXYZ	Hair dryer	Off	0.1	
D3015, D301WXYZ	Hair dryer	Off	0.1	
D5220, D522WXYZ	Hair dryer	Off	0.1	
D5210, D521WXYZ	Hair dryer	Off	0.1	
D35A	Hair dryer	Off	0.0	
D3190, D319WXYZ	Hair dryer	Off	0.0	
D26A	Hair dryer	Off	0.1	
AC9140, AC914WXYZ	Hair dryer	Off	0.1	
AC5999, AC599WXYZ	Hair dryer	Off	0.1	
AC9096	Hair dryer	Off	0.1	

AS27A	Air styler	Off Auto-Off The appliance operated approximately 60min and turned into "Off"	0.2 0.2	
AS15A	Air styler	Off	0.1	
HC10A	Hair Clipper	Off	0.1	
AS20A	Air styler	Off	0.1	
S1510	Straightener	Off	0.0	
H9100, H910WXYZ	Hair Setter	\	\	no power switch
H5600, H560WXYZ	Hair Setter	\	\	no power switch
MB08A	Trimmer	\	\	non-rechargeable battery operated
PG180, PG18WXYZ	Personal Groomer	\	\	non-rechargeable battery operated
NE3000, NE3140, NE3150, NE3350, NE3550, NE3560, NE3570, PG3560	Battery operated nose & ear trimmer	\	\	non-rechargeable battery operated
MB4120 MB412WXYZ	Hair Clipper	\	\	non-rechargeable battery operated
AS1220, AS122WXYZ	Air styler	Off Standby	0.1 0.5	
CI95, CI95W1, CI9532, CI9532C	Curling iron	Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.5	
CI12AA	Curling iron	Off Auto-Off The appliance operated approximately 60min and turned into "Off"	0.5 0.5	
S6500	Straightener	Standby Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.6 0.6	
F26A	Shaver	Off	0.4	
R36A	Shaver	Off	0.4	
RG040A, RG041A, RG042A, RG043A	Hair Clipper	Off	0.0	
HC8000 HC9000 HC800WXYZ HC900WXYZ	Hair Clipper	Off	0.3	
HC5810, HC5810L, HC5810WXYZ	Hair Clipper	Standby	0.5	
MB320C	Moustache & Beard Trimmer	Off	0.3	
D12A	Hair dryer	Off	0.0	
D13A	Hair dryer	Off	0.0	
MB01A	Trimmer	\	\	non-rechargeable battery operated
HG01A	Personal Groomer	\	\	non-rechargeable battery operated
KF40E	Hair Setter	\	\	no power switch
R29A&R33A, R34A, R35A, R33B, R34B, R35B	Personal Groomer	Off	0.1	
F10A	Personal Groomer	Off	0.3	
F25A	Personal Groomer	Off	0.0	
PR1230 PR1330 PR123WXYZ PR133WXYZ,	Personal Groomer	Off	0.3	
R08A	Personal Groomer	Off	0.1	
PR1240, PR1250, PR1245, PR1340, PR1350	Personal Groomer	Off	0.0	
S17A	Straightener	Standby	0.4	
S17A with new circuit	Straightener	Off	0.2	
S30A	Straightener	Standby	0.4	
S30A with new circuit	Straightener	Off	0.1	
S12A, S6700	Straightener	Standby	0.4	
S12A with new circuit	Straightener	Off	0.2	
S1450	Straightener	off	0.0	
S2880, S2950	Straightener	off	0.0	
S37A	Straightener	standby	0.6	
S37A with new circuit	Straightener	off	0.2	
S5500	Straightener	standby	0.6	
S5500 with new circuit	Straightener	off	0.2	
S6500	Straightener	standby	0.6	
S6500 with new circuit	Straightener	off	0.2	
HC-335, HC-340, HC09A, KH3000, HC-33WXYZ, HC-34WXYZ, HC09WXYZ, KH300WXYZ	Hair Clipper	\	\	Always in charging mode
R27A	Shaver	Off	0.3	
D16A	Hair dryer	Off	0.1	
D5000	Hair dryer	Off	0.1	
D25A	Hair dryer	Off	0.0	
AS13A	Air styler	Off	0.1	

AS300,AS404	Air styler	Off	0.1	
D28A	Hair dryer	Off	0.1	
D5215	Hair dryer	Off	0.1	
HC06A	Hair Clipper	Off	0.0	
AC8000,AC800WXYZ	Hair dryer	Off	0.1	
AC8820,AC882WXYZ	Hair dryer	Off	0.1	
RG018A	Trimmer	Off	0.3	
SF4810, WSF481VXYZ	Woman Shaver	\	\	non-rechargeable battery operated
F01A	Shaver	\	\	non-rechargeable battery operated
D15A	Hair dryer	Off	0.0	
AC5000;AC50WXYZ	Hair dryer	Off	0.1	
D7777,D777WXYZ	Hair dryer	Off	0.1	
AS22A,AS7050 AS7051,AS21A,AS19A,AS18A,AS17A	Air styler	Off	0.1	
D27A&D27B&D31A	Hair dryer	Off	0.1	
S32A, S32B	straightener	Standby Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.4	
R11A R12A R13A	Shaver	Off	0.3	
S18A	Straightener	Off	0.3	
WDF4820,WDF4830,WDF4840	Shaver	Off	0.3	
F03A WDF5030 WDF503SXYZ	Shaver	Off	0.4	
CI24AW	Curling iron	Standby	0.4	
CI24AX, CI24BX	Curling iron	Standby	0.4	
HC5150,HC515WXYZ,HC5200,HC520WXYZ	Hair Clipper	\	\	Always in charging mode
BHT2000A BHT200WXYZ	body hair trimmer	\	\	Always in charging mode
F24A	Shaver	Off	0.3	
CB4N, CB4NWX	Curling iron	\	\	no power switch
S8670,S867WXYZ	Straightener	Off	0.4	
S15A	Straightener	Off	0.2	
S7300,S7320,S730WXYZ,S732WXYZ	Straightener	Standby	0.2	
S8500, S26A, S8540, VE version	Straightener	Standby	0.5	
	Straightener	Standby ALT-Circuit	0.7	
S8590, S8598_VE version	Straightener	Standby	0.5	
	Straightener	Standby ALT-Circuit	0.3	
S27A,S28A	Straightener	Standby	0.3	
S29A	Straightener	Off	0.2	
S9100,S910WXYZ,	Straightener	Standby	0.5	
S9120,S912WXYZ	Straightener	Standby	0.2	
S11A	Straightener	Off	0.3	
S13A	Straightener	Standby	0.5	
S16A	Straightener	Standby	0.6	
S1A100	Straightener	Off	0.3	
S35A	Straightener	Off	0.3	
CB21A38	Straightener Brush	Off	0.2	
CI5219; CI5619; CI52W0; CI56W0; CI52W1; CI56W1 VE Version	Curling iron	Off	0.4	
CI12AF	Curling iron	Standby	0.2	
CI11AD,CI11AJ	Curling iron	Off	0.3	
CI1A113, CI1A119, CI1A125, CI1A132, CI1A1W, CI1A1X, CI1A138, CI1A145	Curling iron	Off	0.2	
CI21AV	Curling iron	Off	0.2	
CI8319,CI831WXYZ	Curling iron	Off	0.3	
CB65A45,CB65, CB65A45X	Curling iron	Off	0.3	
CI83V6, CB8338-VE Version	Curling iron	Off	0.2	
CI13AH CI13AX	Curling iron	Standby	0.5	
CI20AH CI20AX	Curling iron	Standby	0.5	
CI96W1,CI96S1	Curling iron	Standby	0.5	
CI23AW,CI23AX	Curling iron	Off	0.3	
CI53W, CI5318, CI5319, CI5325, CI53WSXYZ, CI5318SXYZ, CI5319SXYZ, CI5325SXYZ	Curling iron	Off	0.3	
D24A	Hair dryer	Off	0.1	
AC5911	Hair dryer	Off	0.1	
D6090,D3090	Hair dryer	Off	0.1	
D5950, D595WXYZ	Hair dryer	Off	0.1	
D5015, D501WXYZ	Hair dryer	Off	0.1	
AS8810, AS88WXYZ	Air styler	Off	0.1	

AS800, AS80WXYZ	Air styler	Off	0.1	
CB7400	Straightener Brush	Off	0.4	
		Auto-Off The appliance operated approximately 60min and turned into "Off"	0.4	
CB7480	Straightener Brush	Off	0.4	
		Auto-Off The appliance operated approximately 60min and turned into "Off"	0.4	
S9600,S960WXYZ	straightener	Standby	0.7	
		Auto-standby the appliance operated approximately 60min and turned into "Standby"		
S9620,S962WXYZ	straightener	Standby	0.7	
		Auto-standby the appliance operated approximately 60min and turned into "Standby"		
PG09A	Personal Groomer	\	\	Always in charging mode
PG6045, PG6050, PG604WXYZ, PG605WXYZ	Personal Groomer	Off	0.4	
HC363 HC363C HC365 HC36WXYZ	Hair clipper	Off	0.3	
HC03A RG024A	Hair clipper	Off	0.4	
PG04A	Personal Groomer	Off	0.1	
HC5880,HC588WXYZ,FUR-101067,FUR-10106WXYZ, RG031A, RG007A	Hair clipper and animal cliper	Off	0.3	
MB6850 MB685WXYZ, RG037A	Trimmer	Off	0.1	
HC02A	Personal Groomer	Off	0.4	
RG036A, RG036B	Personal Groomer	Off	0.1	
HC5100 HC510WXYZ	Hair clipper	Off	0.1	
RG016A,HC4250,HC425WXYZ	Hair clipper	Off	0.2	
HC08A	Hair clipper	Off	0.1	
PG12A	Trimmer	Off	0.1	
HC13A	Hair clipper	Off	0.3	
HC18A	Hair clipper	Off	0.2	
MB02A	Trimmer	\	\	Always in charging mode
PG03A,PG03B	Personal Groomer	\	\	Always in charging mode
HC5300,HC5500,HC7110,HC7130, HC530WXYZ,HC550WXYZ,HC711WXYZ,HC713WXYZ	Hair clipper	\	\	Always in charging mode
CI91X,CI91W,CI9132,CI91XVSYZ,CI91WVSYZ,CI9132VSYZ	Curling iron	Off	0.2	
RG025A, RG026A	body hair trimmer	Off	0.1	
HG03A	Personal Groomer	Off	0.1	
HC16A	Hair clipper	\	\	Always in charging mode
HC15A	Hair clipper	\	\	Always in charging mode
PG6130 PG613WXYZ	Personal Groomer	\	\	Always in charging mode
PG6020 PG6030 PG602WXYZ PG603WXYZ	Personal Groomer	\	\	Always in charging mode
RG004A	Trimmer	\	\	Always in charging mode
HC17A	Hair clipper	\	\	Always in charging mode
RG011A,PG6171,PG6170,PG617WXYZ	Personal Groomer	Off	0.1	
RG035A, RG035B	Personal Groomer	\	\	Charging via USB cable only
AS500,AS50WXYZ	Air styler	Off	0.1	
R39A R39B	Shaver	\	\	Charging via USB cable only
F02A	Shaver	\	\	Charging via USB cable only
		Off	0.4	with adaptor
D36A	HAIR DRYER	Off	0.0	
AS28A	Air styler	Standby	0.7	
R37A,R37B	Shaver	\	\	Charging via USB cable only
R38A,R38B	Shaver	\	\	Charging via USB cable only
MB4700, MB470WXYZ	Trimmer	Off	0.1	
R3130, R3150	Shaver	Off	0.3	
CI32AF	Curling iron	Off	0.3	
CI32AH	Curling iron	Off	0.3	