

REMINGTON®

EST. NEW YORK 1937

 
 
 
 
 
 
 
REMINGTON ONE™

Power Dry & Smooth Brush



AS6077AU

www.remington-products.com.au
www.remington.co.nz

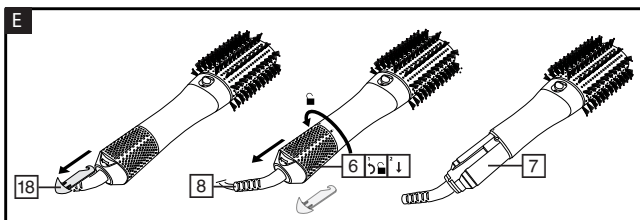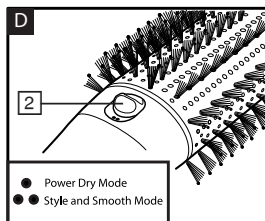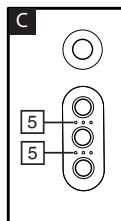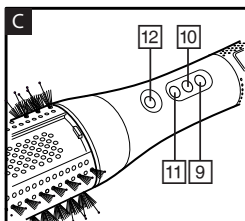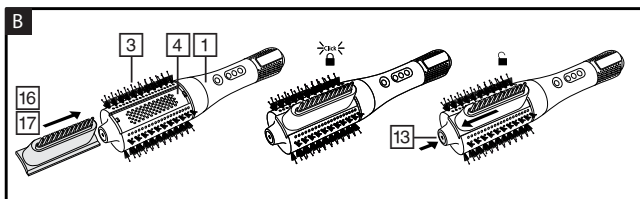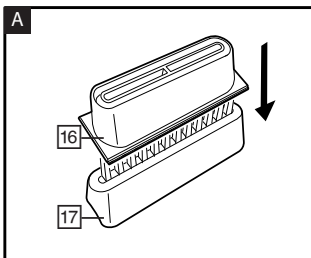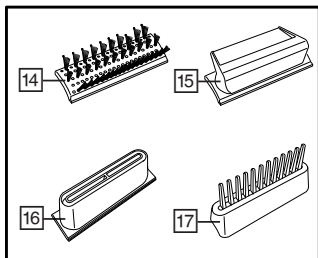

Before First Use



Read the instructions and retain for future reference.

Intended Use



Household use only

Specification

Power Rating (W)	1100-1300
Rated Voltage (V)	220-240V, 50/60Hz

Warning Symbol Glossary



Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and cable out of reach of children.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not use the product with a damaged cord.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap around the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When the appliance is connected to the power supply, never leave it unattended
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its

service agents or similarly qualified persons in order to avoid a hazard.

- The power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

Parts List

1	Power Handle
2	Mode selector switch
3	Ceramic Oval Brush with Anti-Tangle Bristles
4	Attachment channel
5	Heat / Speed setting display
6	Removable air filter cover
7	Inner mesh
8	Swivel cord
Controls	
9	On/off button
10	Speed selector button
11	Heat selector button
12	Cold Shot button
13	Attachment release button
Accessories	
14	Bristle attachment
15	Fly Away Tamer attachment

16	Fast Drying Concentrator attachment
17	Root Boost Comb teeth (works with Fast Drying Concentrator attachment)
18	Cleaning Tool
Not Shown	
19	Storage pouch
Illustrated instructions	
A	Accessories require assembly
B	Attaching accessories
C	Function Buttons
D	Mode Selector
E	Cleaning Tool and removing air filter cover

Fitting & removing attachments

- To fit attachments, position the attachment at the entrance of the channel on the Oval Brush barrel and push into the channel until it clicks into place. (Fig B)
- Attachments can be fitted in either orientation.
- To remove the attachments, press:

13	Attachment release button
-----------	---------------------------

and slide out of the barrel.

CAUTION Attachments can become hot during use, let them cool before removing.

TIP Activating Cold Shot for a few seconds before removing attachments can help to reduce their temperature.

Use

- Plug into the mains power supply.

The heat setting display will flash green indicating the styler is in standby mode.

- Press:

9	On/off button
----------	---------------

- Select styling mode using:

2	Mode selector switch
----------	----------------------

Mode - Power Dry

High velocity air emitted from the attachment channel in the centre of the barrel.

Parts List	Mode	Symbol
2	Power Dry	●

For use with:

15	Fly Away Tamer attachment
16	Fast Drying Concentrator attachment
17	Root Boost Comb teeth (works with Fast Drying Concentrator attachment)

Mode - Style & Smooth

Controlled air emitted from all around the barrel.

Parts List	Mode	Symbol
2	Style & Smooth	●●

For use with:

3	Ceramic Oval Brush with Anti-Tangle Bristles
----------	--

Speed

Select your desired speed settings using:

10	Speed selector button
-----------	-----------------------

Light Matrix	Air Speed
●●●	Fast
●●○	Medium
●○○	Slow

Heat

Select your desired speed settings using:

11	Heat selector button
-----------	----------------------

Heat Matrix	Matrix colour	Heat Setting
●●●	Red	High
●●○	Red	Medium

●○○	Red	Low
●●●	Red/ Blue	Comfort+™
●●●	Blue	Cold

Comfort+™ Setting

Automatically cycles between hot and cold temperatures to prevent heat build-up on the scalp for comfortable styling. Can be used with any speed setting.

True Cold Shot

Reduces the heat to a constant cold temperature to set your style.

To activate, press:

12	Cold Shot button
-----------	------------------

To de-activate, press either:

11	Heat selector button
12	Cold Shot button

Auto Memory Function

After each use, your styler will automatically set itself to the last heat and speed setting used.

Styling Tips

How to prepare hair for styling with the Fast Drying Concentrator attachment – For use on wet hair.

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Attach the Fast Drying Concentrator to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry ●	High	Fast

- Rough dry your hair as normal until 70-80% dry.

How to add root volume with the Root Boost Comb attachment– For use on hair that is 70-80% dry

- Section hair prior to styling, style the lower layers first.
- Assemble to Root Boost Comb by fitting comb teeth to the Fast Drying Concentrator. (Fig A)
- Attach the Root Boost Comb to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry ●	Medium	Medium

- Place the comb teeth close to your scalp to direct airflow towards the

- roots.
- Gently push the teeth into the roots so the hair lifts against the comb. Hold for up to 10 seconds to boost volume.
- Repeat around the head, finishing at the crown and hairline for maximum lift.

How to create a smooth, voluminous blow-out with the Oval Brush - For use on hair that is 70-80% dry

- Section hair prior to styling, style the lower layers first.
- Attach the bristle insert to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Style & Smooth ●●	Comfort+™	Medium

- Place the brush underneath a section, close to the scalp, and hold for a few seconds while lifting at the roots to boost volume.
- Using gentle tension, glide the styler down through the section at a steady pace to dry and shape. Repeat if needed until fully dry.
- Switch to the Cold Shot setting and brush through again to set and smooth.
- Repeat throughout the hair, working layer by layer for a full, voluminous finish.

How to finish straight styles with the Flyaway Tamer attachment - for use on dry hair

- Attach the Flyaway Tamer attachment to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry ●	Cold	Fast

- Focus on the top layer of the hair. Start near the roots and position the attachment close so your hair. Your hair will be attracted to the attachment.
- Slowly glide the attachment down the length of your hair.
- Repeat around your crown and parting until the desired level of smoothness is achieved.

Thermal Cut-Out

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to **Cleaning & Maintenance** to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

Cleaning & Maintenance

Allow the appliance to cool down before cleaning and storing away.

- Use the cleaning tool to remove any hair build up from the brush barrel and bristles, the cleaning tool is stored within the end of the handle (Fig E)
- Wipe all the surfaces with a damp cloth.
- To maintain peak product

performance and to prolong motor life, it is important to regularly remove any dust and dirt build-up from the styler internals and air filter.

Remove the air filter by first removing the cleaning tool (Fig E) then twisting the filter in the direction shown (Fig E) and pulling it away from the handle revealing the:

7	Inner mesh
---	------------

- Clean with with a cloth or soft brush and then replace the:

6	Removable air filter cover
18	Cleaning Tool

IMPORTANT: Do not attempt to remove the:

7	Inner mesh
---	------------

This is not intended to removed or serviced.

Internal Cleaning Cycle

Regularly cleaning your inlet is recommended to maintain peak performance, maximize efficiency, and prevent premature failure. Internal cleaning cycle can be activated at any time and should be done regularly.

As a reminder, after 800 minutes of use (maximum recommended time between cleaning), the heat and speed setting displays will flash 10 times. Running the internal cleaning cycle will reset this timer.

If the internal cleaning cycle is not performed, the cleaning reminder will activate again the next time you use your styler.

To activate Internal Cleaning Cycle:

Parts List	Action	Duration (seconds)
6	Remove	n/a
10	Press+Hold together	3
11		

During the internal cleaning cycle, the motor will operate in the reverse direction for 10 seconds and blow air out of the air filter to clean the internal parts of the styler.

Disposal & Recycling

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Warranty against defects

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at

our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original

proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:
(a) Any serial number or appliance plate is removed or defaced;
(b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Locked Bag 3004
Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800
623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

NZ

Spectrum Brands New Zealand Limited
PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand:
0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

Service Centre

AU

Spectrum Brands Australia Pty Ltd

Ref. No. AS6077AU

Type No. AS28A

25/UK/ AS6077AU

T22-7004069-A

Version 06 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

© 2026 Spectrum Brands, Inc.
