

REMINGTON®

EST. NEW YORK 1937


REMINGTON ONE™


Digital Dry & Style Hair Dryer

EC6077AU



www.remington-products.com.au
www.remington.co.nz

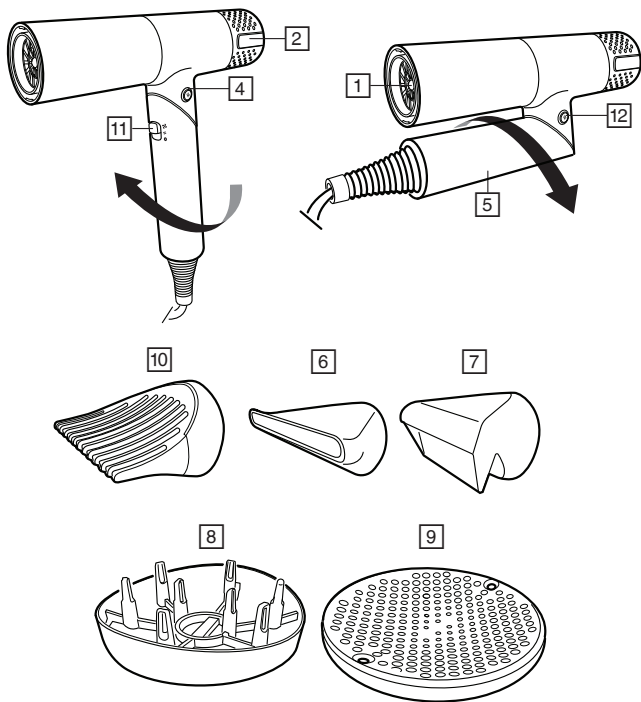

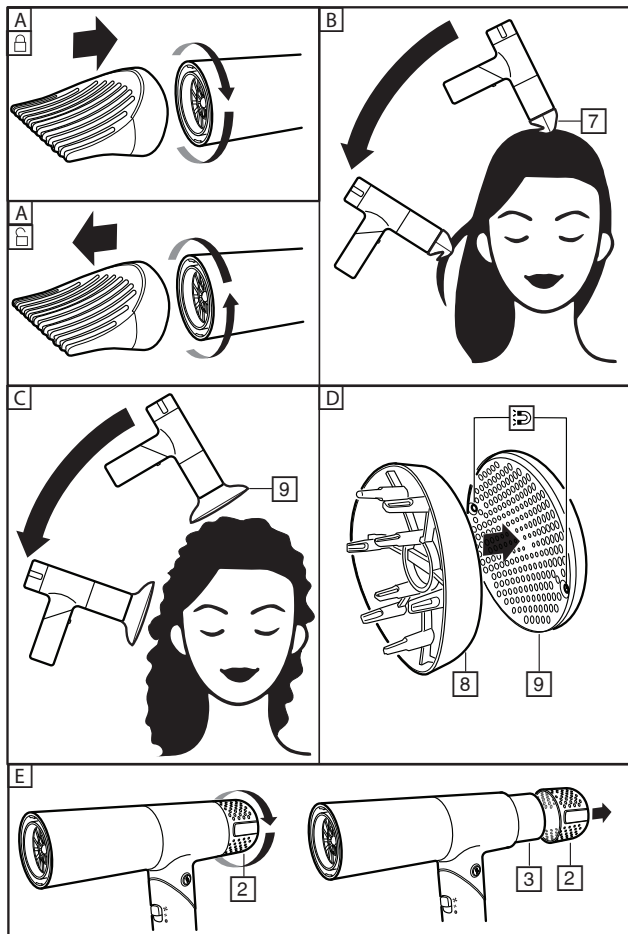

Before First Use



Read the instructions and retain for future reference.

Intended Use



Household use only

Specification

Power Rating (W)	1350-1600
Rated Voltage (V)	220-240V, 50/60Hz

Warning Symbol Glossary



Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



CAUTION: Attachments can become hot during use, let them cool before removing.

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.

- Do not operate the appliance if it's damaged or malfunctions.
- Do not operate the appliance in the folded position.
- Do not use accessories or attachments other than those we supply.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance. Cleaning and maintenance shall not be done by children without supervision. Keep the appliance and cable out of reach of children.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*. Ask your installer for advice.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your get drawn into the appliance.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap around the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When the appliance is connected to the power supply, never leave it unattended
- Burn hazard. Keep appliance out of

reach from young children, particularly during use and cool down

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

Parts List

1	Outlet grille
2	Removeable air filter
3	Inner mesh
4	Heat setting indicator ring
5	Folding handle
6	Concentrator attachment
7	Flyaway tamer attachment
8	Curl defining diffuser prongs
9	Gentle drying diffuser attachment
10	Root boost comb attachment
Controls	
11	Speed selector switch
12	Heat selector button
Accessories (not shown)	

13

Storage bag

Fitting & removing attachments

Fit attachments by pushing onto the front of the hair dryer until they click in place (Fig. A). Once fitted attachments can be rotated as required.

TIP: Selecting the cold temperature setting for a few seconds before removing accessories can help to reduce their temperature.

Use - Speed Setting

Plug the appliance into the mains power supply.

To switch on, select your desired speed setting using the speed selector switch.

Parts List	Setting	Symbol
11	Off	0
	Slow	⌘
	Fast	⌘

Use - Heat Setting

Select required heat setting using the heat selector button.

Parts List	Setting	Indicator Ring Colour
12	Cold	Blue
	HaloGuard™	Green
	Low	Amber
	Medium	Pink
	High	Red

HaloGuard™ Heat Setting

A gentle setting to prevent overheating while still providing efficient and comfortable drying. Can be used in conjunction with any speed setting.

True Cold Shot

Reduces the heat to a constant cool temperature to set your style. Can be used in conjunction with any speed setting.

Auto Memory

Each time you use your dryer it will automatically set itself to the last heat setting used.

Styling Tips

How to create smooth styles with the

concentrator attachment.

For best results, dry your hair as normal until it is about 70% dry. Then turn off your dryer and section your hair into manageable areas.

- Select a high heat and fast speed setting.
- Starting on the lower sections of hair, work on one section at a time. Use a round brush (not included) to grip the underneath of your hair and run the concentrator attachment down the section until it's 100% dry.
- Activate the cold setting and run the concentrator down the section again to set your style in place.

How to add root volume using the root boost comb attachment.

For best results, use on hair that is 70-80% dry.

- Place the comb teeth close to your scalp to direct airflow towards the roots.
- Gently push the teeth into the roots so the hair lifts against the comb. Hold for up to 10 seconds to boost volume.
- Repeat around the head, finishing at the crown and hairline for maximum lift.

How to finish straight styles with the flyaway tamer attachment.

For best results use on dry straight / pre-straightened hair.

- Select a low heat and fast speed setting.
- Focus on the top layer of the hair.
- Start near the roots and position the attachment close so your hair. Your hair will be attracted to the attachment.
- Slowly glide the attachment down the length of your hair (Fig B)

- Repeat around your crown and parting until the desired level of smoothness is achieved.

How to gently dry curls with the gentle drying diffuser attachment.

- Select a medium heat and slow speed setting.
- Start drying by hovering the Gentle drying diffuser attachment over your roots and then slowly move over your lengths until 100% dry (Fig. C).
- The gentle diffused airflow speeds up air drying without making contact and disturbing your curls' natural shape.

How to dry and define curls with the curl defining diffuser attachment.

- The finishing diffuser prongs are fitted to the bowl and held in place with magnets (Fig. D).
- Select a medium heat and slow speed setting.
- Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.

Thermal Cut-Out protection

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air.

Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to **Storage, Cleaning & Maintenance** to clean the grille/filter.

If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

Storage, Cleaning & Maintenance

Allow the appliance cool down before cleaning and storing away

- Wipe all the surfaces with a damp cloth.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt build-up from the dryer internals and air filter.

Remove, clean and replace:

2	Removeable air filter
----------	-----------------------

- Clean inner mesh by twisting in the direction shown (Fig. E) and pulling it away from the handle revealing the inner mesh.

Clean

3	Inner mesh
----------	------------

- Remove air filter with a cloth or soft brush and then replace the removable air filter.
- **IMPORTANT:** Do not attempt to remove the inner mesh. This is non removable.

Folding handle

For easy and convenient storage, twist the handle to make the dryer more compact in size.

Internal Cleaning Cycle

Regularly cleaning your inlet is recommended to maintain peak performance, maximize efficiency, and prevent premature failure. Internal cleaning cycle can be activated at any time and should be done regularly. As a reminder, after 800 minutes of use,

(maximum recommended time between cleaning), the heat setting indicator ring will flash 10 times. Running the internal cleaning cycle will reset this timer. If the internal cleaning cycle is not performed, the cleaning reminder will activate again the next time you use your dryer.

To activate Internal Cleaning Cycle:

- First remove the (2) Removable air filter as shown above in "Storage, Cleaning and Maintenance" (Fig E).
- Press and hold the heat selector button for 3 seconds and then turn on speed selector switch.
- During the internal cleaning cycle, the motor will operate in the reverse direction for 10 seconds and blow air out of the air filter to clean the internal parts of the dryer.

Warranty Conditions

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
(a) Retain this warranty with your receipt/proof of purchase; and
(b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
(a) Any serial number or appliance plate is removed or defaced;
(b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
7. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and

enforceable in Australia against
Spectrum Brands Australia Pty Ltd and
in New Zealand against Spectrum
Brands New Zealand Limited.

Service Centre

AU

Spectrum Brands Australia Pty Ltd
Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA
Customer service in Australia:
1800 623 118
E-mail: [consumer.enquiry@remington-
products.com.au](mailto:consumer.enquiry@remington-products.com.au)
Website: [www.remington-products.
com.au](http://www.remington-products.com.au)

NZ

Spectrum Brands New Zealand Limited
PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND
Customer service in New Zealand: 0800
736 776
E-mail: info@remington.co.nz
Website: www.remington.co.nz

Ref. No. EC6077AU

Type No. D36A

26/AU/ EC6077AU

T22-7004073-A

Version 07 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands Australia Pty Ltd
Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

Spectrum Brands New Zealand
Limited
PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND

© 2026 Spectrum Brands, Inc.
