







Russell Hobbs®

A BRITISH ICON SINCE 1952

RHCM2870

www.russellhobbs.com.au
www.russellhobbs.co.nz

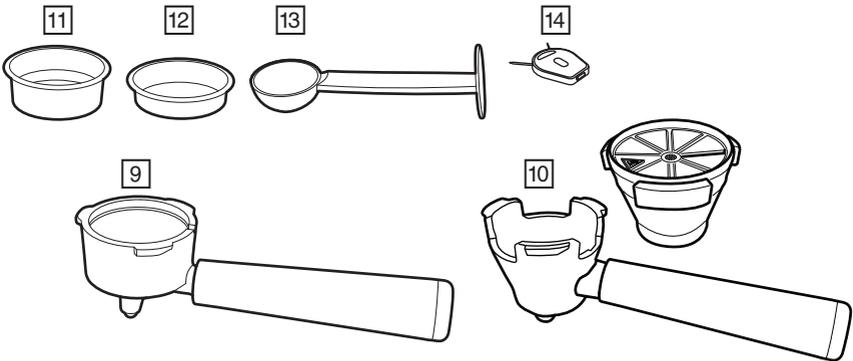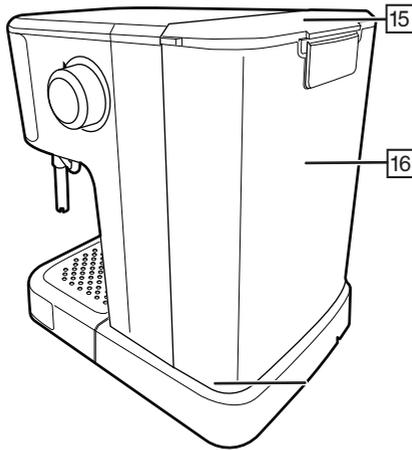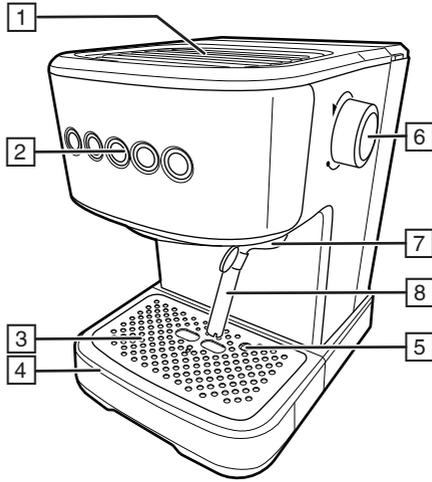

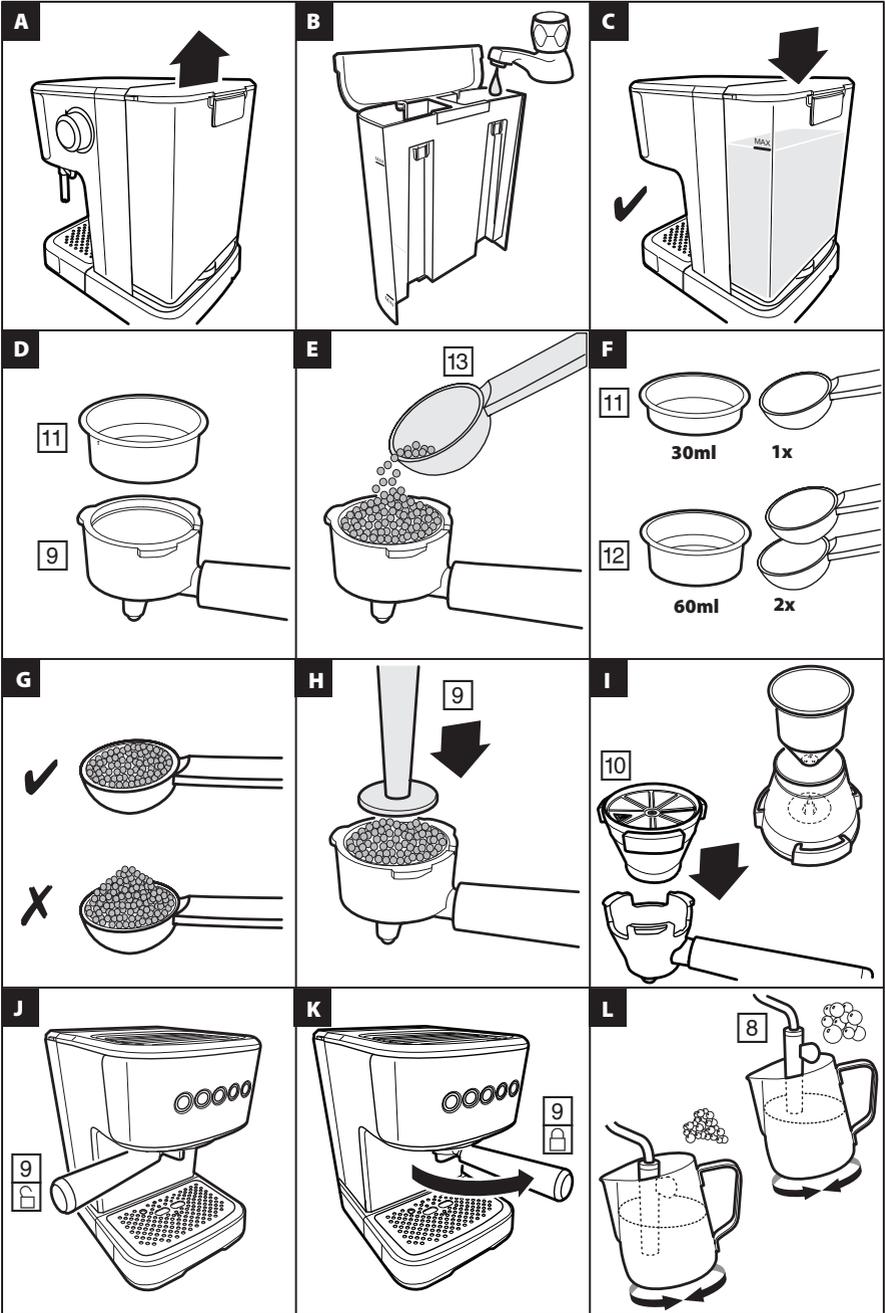

Before First Use

	Read the instructions and retain for future reference.
---	--

Intended Use

	Household use only
	Do not use outdoors

Specification

Power Rating (W)	1100
Operating voltage (V)	220-240, 50-60Hz

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Do not leave the appliance unattended while plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Keep the appliance and power cord out of reach of children or persons with reduced physical, sensory and mental capabilities.
- Misuse of the appliance may cause injury.
- The coffee-maker shall not be placed in a cabinet during use.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
- The surface of the heating element is subject to residual heat after use.
- Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.
- Clean the product and all other accessories after each use.
- Sit the appliance on a stable, level, heat-resistant surface.
- Do not use the appliance if it is damaged or malfunctions.
- CAUTION - To prevent damage to the appliance, do not use aggressive cleaning agents when cleaning. Use a soft cloth and a mild detergent.
- CAUTION - Do not use the

appliance if the enclosure is damaged or has visible cracks.

- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- farm houses.
- For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD / 'Safety Switch') having a rated residual operating current not exceeding 30mA. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.



Use Caution. Sharp objects

Parts List

1	Cup warming plate	
2	Mode Selection Buttons	
3	Drip tray cover	
4	Removable drip tray	
5	Drip tray full indicator	
6	Steam Dial	
7	Swivel arm	
8	Steam nozzle (removable)	
9	Portafilter	
10	Portafilter for Pods	
11	2 shot sieve	
12	1 shot sieve	
13	Measure/tamper	
14	Cleaning tool	
15	Water tank lid	
16	Water tank	

Warning Symbol Glossary

	Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
	The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.
	Do not Immerse in water

Preparation

- Wash the portafilter, sieves and the measure/tamper in warm soapy water. Rinse and dry.
- Clean the appliance by filling and running the appliance without coffee.

Filling Water Tank

- Remove the water tank by lifting it upwards (Fig A).
- Fill the water tank with cold, fresh water observing the max marking (Fig. B).
- Refit the water tank (Fig. C). Ensure it is correctly fitted and fully seated.

Operating Mode Glossary

	1-Shot Function Button
	2-Shot Function Button
	On/Off Button
	Pod Function Button
	Steam Function Button

Operating Modes - Default/ Pre Heat

	On/Off Button
---	---------------

When you press the On/Off button, the appliance goes to Default Mode.

Note - If the appliance is not at brewing temperature,

- On/Off Button remains illuminated
- Other Operating Mode Function buttons flash.

Once the appliance reaches optimum brewing temperature, all mode

buttons will remain illuminated.

Auto Brew Mode

	1-Shot Function Button
	2-Shot Function Button
	Pod Function Button

When the appliance is in Default Mode,

- Press the 1-Shot, 2-Shot, or Pod Function button to start the related brew function.
- To stop the selected function, press the same function button again.

When the brew function is complete, the appliance returns to Default Mode. If required, the appliance may start preheating.

Manual Brew Mode

	1-Shot Function Button
	2-Shot Function Button

When the appliance is in Default Mode,

- Press and hold the 1-Shot, 2-Shot, or Pod Function button to start the related manual brew function.
- Release the button to stop the brew function.

Once the brew function is complete, the appliance returns to Default Mode. If required, the appliance may start preheating.

Steam Function

The steam function can be used to heat milk, froth milk and heat drinks that have cooled.

When the appliance is in Default Mode,

- Press the Steam Function Button to start Steam Mode.

The Steam function button will flash whilst preheating. Once temperature is reached the Steam function will remain illuminated.

Start and Stop Steaming

	Steam Function Button
6	Steam Dial

- To start steaming, open the Steam Control Dial.
- To stop steaming, close the Steam Control Dial.
- To exit Steam Mode and return to Default Mode, press the Steam Function button.

	The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.
---	---

Use the hot water function to cool the machine more quickly.

Always clean the Steam Nozzle after each use. Immerse in a cup of clean water and wipe with a damp cloth.

Steam Function Error Conditions

- If steaming continues for more than 180 seconds, the appliance will stop steaming.
- The appliance will not function until the Steam Control Dial is closed.
- When the Steam Control Dial is closed, the appliance returns to Steam Mode.

Hot Water Dispensing

6	Steam Dial
----------	------------

The Hot Water Function can be used when the appliance is at or above brewing temperature.

For example, you can use it to cool the appliance after steaming.

When the appliance is in Default Mode,

- Open the Steam Control Dial to start hot water dispensing.
- Close the Steam Control Dial to stop hot water dispensing.

Hot Water Error Conditions

- If hot water dispensing continues for more than 90 seconds, the appliance will stop dispensing.
- The appliance will not function until the Steam Control Dial is closed.
- When the Steam Control Dial is closed, the appliance returns to Default Mode.

Preset Time Setting Function

	1-Shot Function Button
	Steam Function Button

When the appliance is in Default Mode,

- Press and hold the 1-Shot and Steam buttons together for 5 seconds to start the preset time setting function.
- The 1-Shot, 2-Shot, and Pod indicators flash. All other Mode buttons remain off.

Set Preset Time

To set the brew time for 1-Shot, 2-Shot, or Pod:

- Press and hold the desired function button for the required brew time.
- Brewing starts while the button is pressed.
- Release the button to save the new preset time.
- All indicators flash three times to confirm the new setting.
- After confirmation, the 1-Shot, 2-Shot, and Pod indicators continue flashing.

Exit Preset Time Setting

	On/Off Button
	Steam Function Button

To exit the preset time setting

function:

- Press and hold the ON/OFF and Steam buttons together for 5 seconds.

Preset Time Setting Error Conditions

If the brew time exceeds the allowed limit:

- 1-Shot - more than 30 seconds.
- 2-Shot - more than 50 seconds.
- Pod - more than 45 seconds.
- The appliance will return to Default Mode without saving the new preset time.

Reset Time Setting to Factory Setting

To reset all preset times to factory settings:

- Press and hold the Steam button for 5 seconds.

Note - Reset times can only be actioned when in Preset Time Mode.

Clean Warning

After 500 uses (including brewing, steaming, or hot water dispensing), the appliance shows a clean warning.

When you turn on the appliance, all indicators flash three times.

After the flash sequence, the appliance returns to Default Mode.

Cancel Clean Warning

	2-Shot Function Button
	Pod Function Button

To cancel the clean warning, press and hold the 2-Shot and Pod Function buttons together for 3 seconds.

Error Functions Overview

When any of the following error conditions occur, all indicators flash:

- You try to brew or steam when the appliance is not at the correct temperature (too hot or too cold).
- You try to dispense hot water before the appliance is preheated. (Hot water dispensing is allowed only when the appliance is overheated.)
- You use manual brewing for more than 60 seconds.
- You dispense hot water for more than 90 seconds.
- You use steaming for more than 180 seconds.
- The Steam Control Dial is open when the appliance is turned on.
- You open the Steam Control Dial during a brewing cycle (automatic or manual).
- The preset brew time is too long:
 - More than 30 seconds for 1-Shot.
 - More than 50 seconds for 2-Shot.
 - More than 45 seconds for Pod.

Tips

- Place Espresso cups on the Cup Warming Plate to warm.
- To achieve a hotter Espresso, warm the portafilter before use. Fit the sieve into the portafilter, fit the portafilter and run the brewing process for 5-10 seconds to heat the filter up. Then, remove the portafilter and use it as normal to make espresso. Be aware when handling the portafilter and sieve that they will be hot after doing this.
- After each use of the Steam Function, the unit reaches maximum operating temperature and will not brew until the appliance cools. To cool the appliance quicker, operate the Hot Water Dispensing function.

Cleaning & Maintenance

- Unplug the appliance and let it completely cool down.
- Clean the exterior surfaces and the steam nozzle with a slightly damp cloth and then dry them thoroughly. Make sure that no water enters the product interior (for example, through the control opening). The steam nozzle tip can be removed by pulling it downwards and it can then be washed separately.
- Remove the portafilter and sieve and empty out the coffee grounds. Wash under running water and

-
- dry thoroughly.
 - Wipe the area on the machine where the portafilter fits.
 - Empty the drip tray when you have finished using the machine, or when the drip tray full indicator pops up.
 - Use the cleaning tool to unblock the openings in the portafilter.
 - The steam nozzle, sieves, drip tray and drip tray cover can be cleaned in a dishwasher.

Descaling

At a minimum, descaling should be done when you receive the Clean Warning.

Never use a descaling product based on mineral acids such as sulphuric acid, hydrochloric acid, sulphamic acid and acetic acid (e.g. vinegar). These descalers may damage the machine.

Use a descaling product recommended for appliances with plastic parts.

Products returned under guarantee with faults due to scale will be subject to a repair charge.

- Descale your product regularly depending on your water's lime content and frequency of use.
- Use a proprietary descaling product and follow the manufacturer's instructions.
- Pour fresh water and the specified amount of decalcifier into the water tank.
- Repeatedly start the brewing process and also use the 'hot

water' process to clean the steam nozzle and internal components.

- Do this until the water tank is empty. If necessary, repeat this process.
- After descaling, rinse the product several times by brewing water with no coffee to remove any decalcifier residue.

Recycling

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Customer Services

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: consumer.enquiry@russellhobbs.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776

Email: info@russellhobbs.co.nz
Website: www.spectrumbrands.co.nz

Warranty

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd

Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods

repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:

3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.

5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect

in workmanship or materials used.

6. The warranty granted under clause 3 is limited to repair or replacement only.

7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:

- (a) Retain this warranty with your receipt/proof of purchase; and
- (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:

- (a) Any serial number or appliance plate is removed or defaced;
- (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.

10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.

11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to

and from the Supplier or us.

12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Register your product

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit:

<https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit:

<https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

BEAUTIFULLY BRITISH IDEAS
SINCE

1952