





Russell Hobbs



instructions

**£10,000 prize draw
PLUS Free Rewards Gallery**

Register online now to
collect your reward
See back for
details

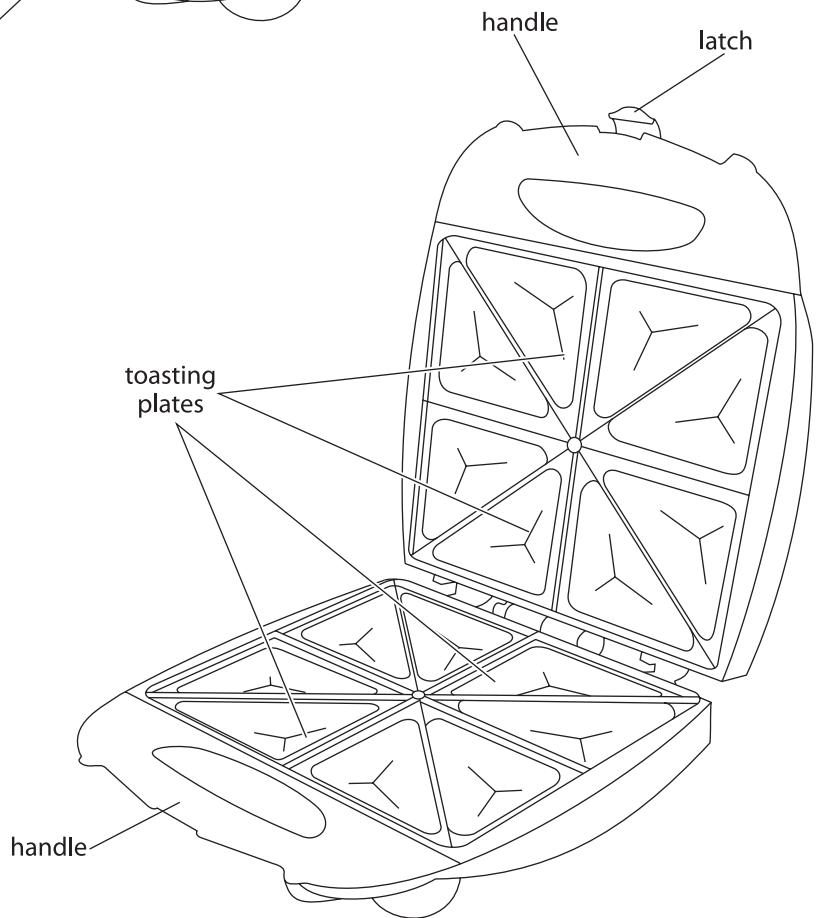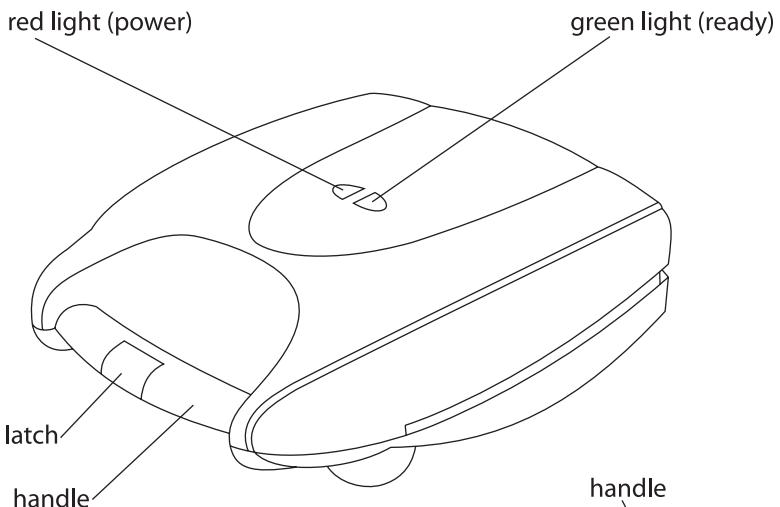

Read the instructions, keep them safe, pass them on if you pass the sandwich toaster on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The sandwich toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't use raw meat of any kind in the sandwich toaster. All fillings must be safe and fit to eat before they are used in the sandwich toaster.
- 3 Don't put the sandwich toaster in liquid, don't use it in a bathroom, near water, or outdoors. 
- 4 Don't touch hot parts – use the handles.
- 5 Sit the sandwich toaster on a stable, level, heatproof (not just heat-resistant) surface.
- 6 Bread, oil, and other foods may burn. Don't use the sandwich toaster near or below curtains or other combustible materials, and watch it while in use.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Don't wrap food in plastic film, polythene bags, or metal foil. You'll damage the sandwich toaster, and you may cause a fire hazard.
- 9 Keep the sandwich toaster and the cable away from hotplates, hobs or burners.
- 10 Unplug the sandwich toaster when not in use, before moving and before cleaning.
- 11 Don't use the sandwich toaster for any purpose other than toasting sandwiches/making toasties.
- 12 Don't fit attachments or accessories unless we supply them.
- 13 This appliance must not be operated by an external timer or remote control system.
- 14 Don't use the sandwich toaster if it's damaged or malfunctions.
- 15 If the cable is damaged, return the sandwich toaster, to avoid hazard.

household use only

BEFORE USING FOR THE FIRST TIME

Wipe the non-stick surfaces of the toasting plates with a damp cloth.

PREPARATION

- 1 Sit the sandwich toaster on a stable, level, heatproof (not just heat-resistant) surface.
- 2 Don't use the sandwich toaster near or below curtains or other combustible materials, and watch it while in use.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Put the plug into the power socket (switch the socket on, if it's switchable).
- 5 The red light (power) will glow as long as the sandwich toaster is connected to the electricity supply.
- 6 The green light (ready) will glow when the elements reach the correct cooking temperature, then cycle on and off with the thermostat.
- 7 Wait till the green light (ready) glows before starting to cook.

MAKING TOASTIES

- 8 Use a level dessertspoon of filling per toastie. Too much will ooze out.
- 9 Fresh medium-sliced bread is best.
- 10 Cut 8 slices of bread to overlap the plates by about 0.5cm (1/4 inch) all round.

- 11 Spread butter/margarine thinly on each slice – don't use low fat spread.
- 12 Low fat spreads may burn, damaging the non-stick surfaces.
- ★ Toasties are made **buttered side out**.
- 13 Put 4 slices of bread, buttered side down, on the bottom toasting plate.
- 14 Press the bread gently into the hollows in the toasting plate with a wooden spoon.
- 15 Fill the hollows formed in the bread with the filling.

caution Don't use raw meat of any kind in the sandwich toaster. All fillings must be safe and fit to eat before they are used in the sandwich toaster.

- 16 Lay a slice of bread, buttered side up, on top of each of the filled slices.
- 17 Close the lid, squeeze the handles together, and press in the latch.
- 18 Cook for 2-4 minutes, or till the outside of the bread turns golden brown.
- 19 If the toasties stick, use a plastic or wooden spatula to release them.

CARE AND MAINTENANCE

- 20 Unplug the sandwich toaster and let it cool before cleaning and storing away.
- 21 Wipe the toasting plates, and the external surfaces with a damp cloth.
- 22 Use a paper towel with a dab of cooking oil to remove stubborn stains.
- 23 Don't put the sandwich toaster in water or any other liquid.
- 24 Don't use harsh or abrasive cleaning agents or solvents.
- 25 Don't use scourers, wire wool, or soap pads.
- 26 At the places where the top and bottom toasting plates make contact, the non-stick surfaces may show signs of wear. This is purely cosmetic, and will not affect the operation of the sandwich toaster.

sandwich fillings

savoury fillings

ham and pineapple	ham and mushroom
cheese and onion/celery/apple	salami and tomato
ham, cheese and tomato	cream cheese and broccoli
mixed veg and grated cheese	cheese, onion and mashed potato
cheese, apple and sultanas	smoked ham and gouda
leftover ratatouille/curry	mince (cooked) and onion
cold roast beef and onion	cold roast pork and apple sauce
sausage (cooked) and baked beans	chicken (cooked) and ham/mushroom
pizza-type (cooked ham, cheese, tomato)	bacon (cooked), lettuce and tomato

sweet fillings

apple and sultanas/raspberries	apple and cinnamon
banana and butterscotch sauce	apple and blackcurrant
mincemeat (sweet mince)	cherry pie filling
date, walnut and honey	mandarin orange
banana and honey	fruits of the forest
cherry and almonds	peaches and custard (thick, not runny)

variations

Use pastry, pizza base, or ciabatta instead of ordinary bread; try fruit loaf with a sweet filling; try garlic or herb butter.

notes

notes

notes

UK WIRING INSTRUCTIONS


The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the green/yellow wire to \textcircled{E} or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

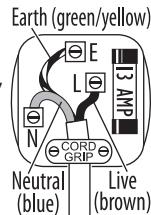

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Limited, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/rhobbs