

 


Russell Hobbs



instructions


 
£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

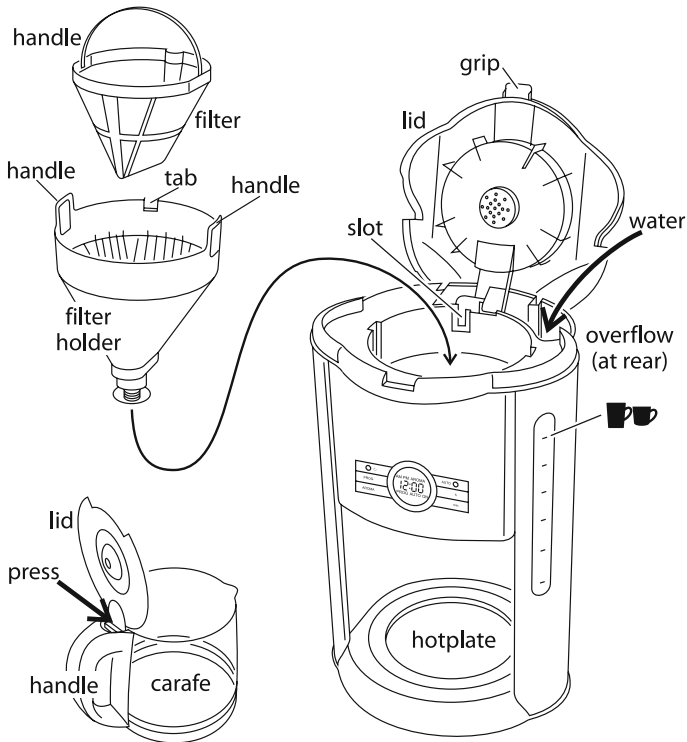

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.


IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:


- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 Sit the appliance on a stable, level, heat-resistant surface.
- 5 Keep the appliance and cable away from the edges of worktops and out of reach of children.
- 6 Unplug the appliance when not in use.
- 7 To stop the coffee maker while it's brewing, press the  button.
- 8 Don't put the carafe in a microwave oven.
- 9 Don't try to adjust the metal band round the carafe, you'll break the glass.
- 10 Don't use accessories or attachments other than those we supply.
- 11 Don't use the appliance for any purpose other than those described in these instructions.
- 12 This appliance must not be operated by an external timer or remote control system.
- 13 Don't operate the appliance if it's damaged or malfunctions.
- 14 If the cable is damaged, return the appliance, to avoid hazard.

household use only

BEFORE USING FOR THE FIRST TIME

- 1 Fill the reservoir to , and run the appliance without coffee.
 - 2 Let it cool, discard the water, then use it normally.
-

FILLING


 
- 3 Use the grip to open the lid, and expose the reservoir.
- 4 Remove the carafe from the hotplate.
- 5 Fill the reservoir with at least 2 cups of water, but not above .

- 6 Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water.
- 7 Close the lid.
- 8 Replace the carafe on the hotplate.


 
SWITCH ON

- 9 Put the plug into the power socket (switch it on, if it's switchable).

COFFEE NOW

- 10 Ignore the clock.
- 11 If you're making less than 5 cups of coffee, press the **AROMA** button, to turn the brew strength feature on. **AROMA** will appear on the display (see "brew strength **AROMA**").
- 12 It slows the brewing process, so your coffee will have the same strength as coffee from a full carafe.
- 13 You may hear the switch operating as it does this.
- 14 Press and release the  button.
- 15 The  light will glow, and "**ON**" will show on the display.
- 16 Shortly afterwards, coffee will start to drip into the carafe.
- 17 When it's done, the hotplate will keep the carafe warm.

COFFEE LATER

- 18 Check the  light is off. If it isn't, press the  button to turn it off.
- 19 If you're making less than 5 cups of coffee, press the **AROMA** button, to turn the brew strength feature on. **AROMA** will appear on the display (see "brew strength **AROMA**").
- 20 Initially, the display will show **AM**, and 12:00 will be flashing.
- 21 Set the clock to the correct time.
- 22 The display will show **AM** for morning, and **PM** for afternoon.
- 23 Use the **h** and **min** buttons to set the correct hour and minute.00.
- 24 The clock will retain its settings until the coffee maker is unplugged. It will reset to 12:00 next time you plug it in.
- 24 Set the timer to the time you want to start brewing.
- 26 Press and release the **PROG** button.
- 27 "**PROG**" will flash on the display.
- 28 Use the **h** and **min** buttons to set the correct hour and minute.

- ✳ If you don't press either the **h** or **min** buttons within 5 seconds, the coffee maker will revert to "normal", and the time will show. You'll have to press the **PROG** button, and start again.
 - 29 Press and release the **AUTO** button.
 - 30 The **AUTO** light will glow, and "**AUTO**" will show on the display.
 - 31 When the set time is reached, the **AUTO** light will go off, the ☺ light will glow, the display will change from "**AUTO**" to "**ON**", and brewing will start.
 - 32 To cancel the timer before brewing starts, press the **AUTO** button.
 - 33 To stop the coffee maker while it's brewing, press the ☺ button.
-

FINISHED?

- 34 Press and release the ☺ button.
 - 35 The ☺ light will go off.
 - 36 Unplug, and let the appliance cool down fully before cleaning, or for about 10 minutes before refilling.
-

AUTO SHUT-OFF

- 37 About 2 hours after brewing, the coffee maker will shut down. The hotplate will go off, the ☺ light will go off, and "**ON**" will disappear from the display.
 - 38 If left for much more than an hour, chemical changes in the coffee liquor start to affect the flavour. It's best to pour it away and make a fresh pot.
-

BREW STRENGTH AROMA

- 39 Use this feature if you're brewing less than 5 cups of coffee. It slows the brewing process, so your coffee will have the same strength as coffee from a full carafe.
- 40 You may hear the switch operating as it does this.
- 41 You may press the brew strength button **AROMA** before or during the brewing process, to activate or deactivate the brew strength feature.
- 42 Press the **AROMA** button to activate the brew strength feature, the **AROMA** icon will show up on the display.
- 43 Press the **AROMA** button again to deactivate the feature.

A QUICK CUP

- 44 You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
- 45 To prevent the filter holder overflowing, replace the carafe on the hotplate within 20 seconds. This may not sound much, but you'll find it's more than enough to pour a couple of cups of coffee.
- 46 When you replace the carafe on the hotplate, the non-drip valve opens, to let any remaining coffee through.

CARE AND MAINTENANCE

- 47 Unplug the appliance and let it cool down before cleaning or storing away.
- 48 Use the grip to open the lid.
- 49 Use the handles on the sides of the filter holder to lift it out.
- 50 Tip the contents of the filter into the bin.
- 51 Clean the carafe, filter, and filter holder in warm soapy water.
- 52 Press the lever, above the handle, to open the carafe lid.
- 53 Clean the outside surfaces of the appliance with a damp cloth.
- 54 Align the tab at the back of the filter holder with the slot at the back of the coffee maker, and lower the filter holder into the coffee maker.
- 55 Drop the filter into the filter holder.
- 56 Close the lid.
- 57 Don't put any part of the appliance in a dishwasher.

DESCALING

- 58 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
- 59 Descale regularly – at least monthly. Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge..

instructions – more instructions are available on our website:

 
<http://www.russellhobbs.com/ifu/550980>

WIRING INSTRUCTIONS UK plugs only

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

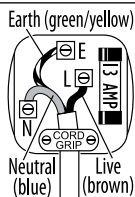



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/rhobbs
