



Russell Hobbs




23370

 www.russellhobbs.com

Register online for an EXTRA year guarantee

Visit www.russellhobbs.co.uk/productregister/ You must register within 28 days of purchase

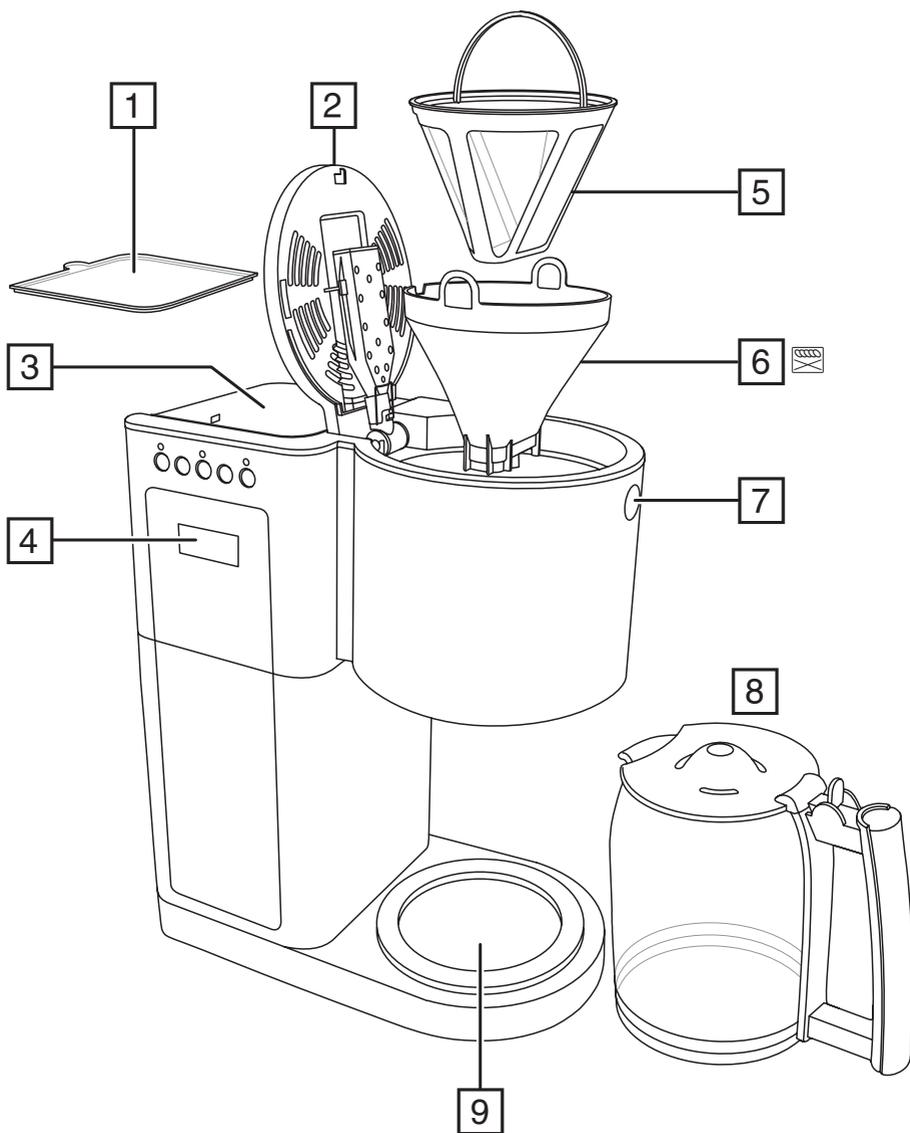

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8 years.

Misuse of the appliance may cause injury.

 The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

The surface of the heating element is subject to residual heat after use.

Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- farm houses.

 Do not use this appliance near bathtubs, showers, basins or other vessels containing water

- Sit the appliance on a stable, level, heat-resistant surface.
- Keep the appliance and cable away from the edges of worktops.
- Don't use accessories or attachments other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't use the appliance if it's damaged or malfunctions.

PARTS

- | | |
|---------------------------|---|
| 1. Reservoir lid | 6. Filter holder |
| 2. Filter compartment lid | 7. Lid lock |
| 3. Reservoir | 8. Carafe |
| 4. Display | 9. Hotplate |
| 5. Permanent filter |  Dishwasher - top rack |

BEFORE USING FOR THE FIRST TIME

- Fill the reservoir to the max mark, and run the appliance without coffee.
- Let it cool, discard the water, then use it normally.

FILLING

1. Lift the lid off the reservoir.
2. Fill with at least 2 cups of water, but not above the **max** mark.
3. Press the lid lock to open the lid.
4. The reservoir is calibrated to give 10 large cups (at 125ml per cup) and 15 small cups (at 83ml per cup). For each large cup, add 7g of ground filter coffee and for each small cup add 4.5g.
5. Close the lid, and press down to lock it.
6. Put the carafe on the hotplate.

SET THE CLOCK

1. Put the plug into the power socket.
 2. Use the **hr** and **min** buttons to set the correct time in 24 hour format.
- The clock will retain its settings until the coffee maker is unplugged.

MAKING COFFEE

If you want coffee straight away:

1. Press the  button – the  icon will appear on the display.
2. Shortly afterwards, coffee will start to drip into the carafe.
3. When it's done, the hotplate will keep the carafe warm.
4. If you want to stop the coffee maker while it's brewing, press the  button.

USING THE TIMER

1. Set the clock to the correct time. Use the **hr** and **min** buttons.
2. Set the timer to the time you want to start brewing.
 - a) Press the  button .
 - b) Use the **hr** and **min** buttons to set the time you want brewing to start. If you don't press either the **hr** or **min** buttons within 5 seconds, the coffee maker will revert to "normal", and the current time will show. Press the  button to start again.
3. When the time is programmed, press the  button. The light above the  button will come on and the  icon will appear on the display. Your coffee maker is now set to make coffee at the selected time.
4. If you want to check the program time press the  button. The programmed time will show for 3 seconds and then return to the time of day.
5. If you want to cancel the timer before brewing has started, press the  button.

6. If you want to stop the coffee maker while it's brewing, press the  button.

KEEP WARM/AUTO SHUT-OFF

1. The coffee maker will keep the coffee warm for about 40 minutes.  and 40:00 will be displayed and will count down in 1 minute increments.
2. 40 minutes after brewing, the  icon will go out and the coffee maker will shut down and the time of day will be displayed.
3. To wake the appliance, press any button.
4. If left for much more than an hour, chemical changes start to affect the flavour of the coffee. It's best to pour it away and make a fresh brew.

A QUICK CUP

If you want a quick cup of coffee before the brewing cycle has finished:

1. You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
2. To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds.
3. When you replace the carafe on the hotplate the non-drip valve opens to let any remaining coffee through.

SELF CLEAN

After 60 brewing cycles, the clean icon  will appear on the display. This is to remind you to activate your coffee maker's self cleaning feature.

You can use a vinegar solution or a commercial descaling product designed for coffee machines. Follow the directions on the descaling product. If you use a vinegar solution, ensure the kitchen is well ventilated, as heating vinegar causes an unpleasant smell.

This operation will take approximately 45 minutes.

1. Mix 500ml of white vinegar with 500ml of water in the carafe.
 2. Pour the mixture into the reservoir. Don't fill above MAX.
 3. Close the lid.
 4. Replace the carafe on the hotplate.
 5. Put the plug into the power socket.
 6. Press the  button. The light above the button will come on and the  icon will appear on the display.
 7. Your coffee maker will now start its self clean cycle.
 8. At the end of the operation the appliance will switch itself off.
 9. Fill the reservoir to the MAX mark, and operate the appliance without coffee.
 10. Do this 2 or 3 times, till the vinegar smell has gone.
- Products returned under guarantee with faults due to scale will be subject to a repair charge.

CARE AND MAINTENANCE

Clean the filter holder and carafe after each use. Residue from a previous brew will spoil your coffee.

1. Unplug the appliance and let it cool.
2. Tip the contents of the filter holder into the bin.

3. You may clean the carafe, permanent filter, and filter holder in warm soapy water. Rinse thoroughly afterwards to remove all traces of soap.
 4. Clean the outside surfaces of the appliance with a damp cloth.
 5. Replace the filter holder.
 6. Close the lid.
-  You may wash these parts in the top rack of a dishwasher.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.russellhobbs.co.uk/productregister/

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

ONLINE

www.russellhobbs.com for more products

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.russellhobbs.co.uk/productregister/

*You must register within 28 days of purchase.