



# Russell Hobbs





**25980**

 [www.russellhobbs.com](http://www.russellhobbs.com)

**Register online for an EXTRA year guarantee**

Visit [uk.russellhobbs.com/product-registration](http://uk.russellhobbs.com/product-registration) You must register within 28 days of purchase

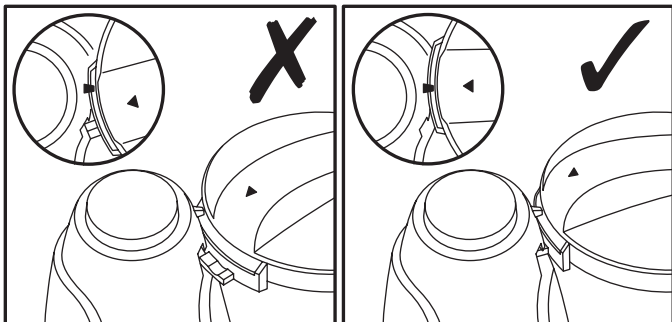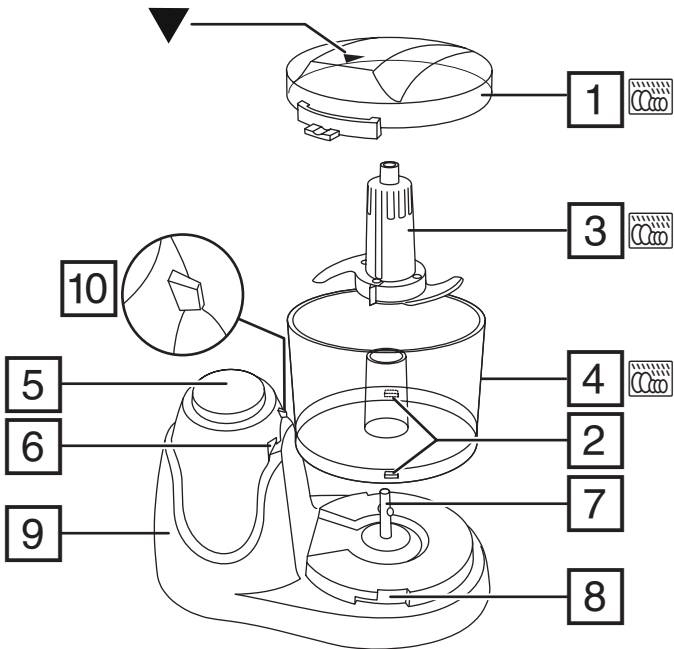

Read the instructions, keep them safe, pass them on if you pass the appliance on.  
Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children must not use or play with the appliance. Keep the appliance and cable out of reach of children.

Always disconnect the appliance from the mains supply socket if it is left unattended and before assembling, disassembling or cleaning.

To avoid injury, take care handling the blades, emptying, and cleaning.

Don't add hot liquid (over 40°C), as it may be ejected due to sudden steaming.

Misuse of the appliance may cause injury.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

- ⊗ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Don't try to chip ice, don't try to chop raw meat, and take great care with the blades.
- Don't run the motor for more than 1 minute at a time, then leave it for a minute to cool down before using it again.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't operate the appliance if it's damaged or malfunctions.

## **HOUSEHOLD USE ONLY**

---

## PARTS

- |               |   |
|---------------|---|
| 1. Lid        | 7. Spindle  |
| 2. Tab        | 8. Slot   |
| 3. Blade unit | 9. Motor unit   |
| 4. Bowl       | 10. Peg   |
| 5. Switch     |  Dishwasher safe |
| 6. Groove     |   |

---

## PREPARATION

1. Sit the motor unit on a stable, level surface.
2. Lower the bowl over the spindle.
3. Locate the tabs under the bowl in the slots in the base.
4. Turn the bowl clockwise to lock it in place.
5. Lower the blade unit over the spindle in the bottom of the bowl.
6. Rotate it till it drops to the floor of the bowl.

---

## PROCESSING

- Put the food in the bowl.
  - Don't process hard foods – i.e. anything you can't cut easily with a kitchen knife.
  - Don't chop big bits – maximum 18mm cubes.
1. Put the lid on the bowl. Turn the lid clockwise till the triangle marking (▼) on the lid lines up with the peg on the motor body. **Your mini chopper won't work unless they are aligned.**
  2. Put the plug into the power socket.
  3. Press the switch to start the motor, release it to switch off.
  4. When processing is complete, unplug the appliance.
  5. Turn the lid anti-clockwise to unlock it.
  6. Lift the lid off the bowl.
  7. Hold the plastic part of the blade unit, turn it to free it from the spindle flanges, and lift it straight up and out of the bowl.
  8. Turn the bowl anti-clockwise to unlock it.
  9. Lift the bowl off the motor unit.

---

## CARE AND MAINTENANCE

1. Unplug before dismantling or cleaning.
2. Clean the outside surfaces of the appliance with a damp cloth.
3. Hand wash the removable parts.
4. Clean the inside of the blade unit with a toothpick.

---

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

## RECIPES

### CORIANDER PESTO

2 handfuls coriander leaves

60 g pine nuts

60 g Parmesan, grated

2 cloves of garlic

125 ml olive oil

Process the coriander, garlic, pine nuts and half the oil till smooth. Transfer to a large bowl. Stir in the Parmesan. Add oil to adjust the consistency: For a dip: thick. For a topping: medium. For pasta sauce: thin.

### SWEET AND SOUR SAUCE

2 shallots

1 clove of garlic

10 ml white wine vinegar

5 ml tomato purée

2 small pieces of ginger, peeled

15 ml soy sauce

5 ml mustard

Process everything till smooth. Serve with chicken, fish, or as a dip.

### BLACK OLIVE AND ANCHOVY SAUCE

125 g pitted black olives

25 g capers, drained

15 ml brandy (optional)

30 g anchovy fillets, drained

75 ml olive oil

black pepper

Reserve half the oil. Process everything else. Add oil to adjust the consistency: For a tapenade: thick. For pasta sauce: thin. Season with black pepper.

### CHUNKY TOMATO SALSA

¼ red chilli (seeds removed)

½ red pepper

½ green pepper

60 ml tomato purée

8 ml olive oil

½ onion

400 g tomatoes (tinned)

1 clove of garlic

1 handful parsley

2.5 g salt

Fit the blade. Chop the onion, red pepper, green pepper, garlic, chilli, and parsley into chunks. Add the tomatoes, olive oil, tomato puree, and salt. Process for 5 seconds.

## **HORSERADISH AND APPLE SAUCE**

125 ml double cream

1 apple, peeled and grated

45 g horseradish relish

5 g paprika

Process the cream till soft peaks form. Transfer to a large bowl. Fold in the rest of the ingredients. Season with black pepper. Serve with beef or sausage.

---

## SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

---

## GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at: **[uk.russellhobbs.com/product-registration](http://uk.russellhobbs.com/product-registration)**

Consumables are guaranteed only for their recommended lifecycle. Replacement/ Spare parts\* are excluded and are only covered by a 1 year warranty.

\* Examples include filters, removable grill plates, drip trays/crumb trays etc.

---

 **ONLINE**

**[www.russellhobbs.com](http://www.russellhobbs.com)** for more products