


# GIZMO

BY Russell Hobbs



instructions

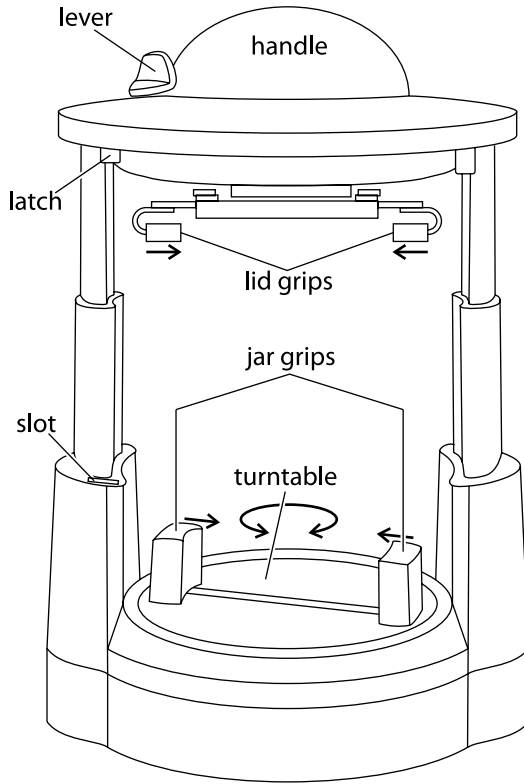

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

### **important safeguards**

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Keep clear of the moving parts.
- 4 Sit the appliance on a stable, level surface.
- 5 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 6 Unplug the appliance when not in use, before moving and before cleaning.
- 7 Keep the appliance and the cable away from hotplates, hobs or burners.
- 8 Don't use accessories or attachments other than those we supply.
- 9 Don't use the appliance for any purpose other than those described in these instructions.
- 10 Don't use the appliance if it's damaged or malfunctions.
- 11 If the cable is damaged, return the appliance, to avoid hazard.



**household use only**

## **opening jars**

- 1 The appliance must only be used for opening jars with screw-on lids.
- 2 Remove any packaging or wrappings from the lid, and wipe any moisture from the lid and the jar.
- 3 Sit the appliance on a stable, level surface.
- 4 Put the plug into the power socket.
- 5 Grip the handle.
- 6 Move the lever towards the handle, to unlock the latch.
- 7 Pull the handle upwards, to open the appliance up.
- 8 Use a finger to rotate the turntable clockwise, to move the jar grips as far apart as they'll go.
- 9 Fit the bottom of the jar between the jar grips.
- 10 Grip the handle.
- 11 Gently press the handle down, till it touches the top of the lid.
- 12 Now press a bit more, to switch the motor on.
  - a) the turntable will rotate
  - b) the jar grips will move inwards, to grip the bottom of the jar
  - c) the lid grips will move inwards to grip the lid
- 13 Stop pressing the handle when the lid comes loose.
- 14 Pull the handle upwards, to open the appliance up.
- 15 Use a finger to rotate the turntable clockwise, to move the jar grips far enough apart to release the jar.
- 16 Remove the jar from the appliance.
- 17 Remove the lid from the jar.

## **care and maintenance**


- 18 Unplug the appliance.
- 19 Use the grip to open the lid.
- 20 Clean the outside surfaces of the appliance with a damp cloth.
- 21 Gently press the handle down, till the latch engages in the slot.
- 22 Don't put any part of the appliance in a dishwasher.
- 23 Don't put the appliance in water or any other liquid.
- 24 Don't use harsh or abrasive cleaning agents or solvents.

We are required, for the moment, to add the following to our instructions:

- 1 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2 Children should be supervised to ensure that they do not play with the appliance.

## connection

The product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

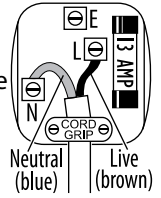

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

### Customer Service

(correspondence only)  
Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS

### Customer Returns

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))  
telephone 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products