




Russell Hobbs



instructions

#1

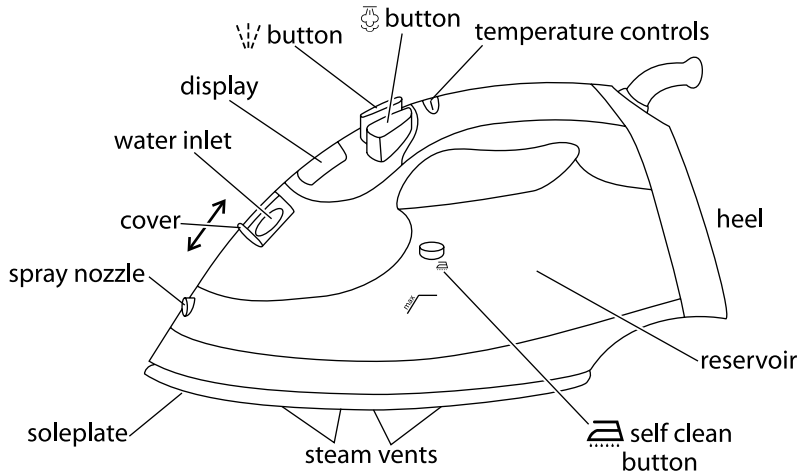

Read the instructions and keep them safe. If you pass the iron on, pass on the instructions too. Remove all packaging, but keep it till you know the iron works.

important safeguards

Follow basic safety precautions, including:

- 1 The iron must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
- 5 Don't touch the soleplate, and keep away from the steam coming from it.
- 6 Take care when emptying the iron – it may contain hot water.
- 7 Don't use the iron in the vicinity of children.
- 8 Use the iron on a stable, level, heat-resistant surface, preferably an ironing board.
- 9 Don't leave the iron unattended while plugged in, or while it's standing on the ironing board. It could be knocked over by you, by a child, or by a pet.
- 10 Unplug the iron before filling, before cleaning, and after use.
- 11 Don't fill the iron directly from the tap, use the jug.
- 12 Don't fill past **max**, or water may escape in use.
- 13 Sit the iron upright when you're not ironing, and when you store it away.
- 14 Leave the iron upright to cool before cleaning.
- 15 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 16 Don't fit any attachment or accessory other unless we supply it.
- 17 Keep the iron and the cable away from hotplates, hobs or burners.



- 18 Don't use the iron for any purpose other than those described in these instructions.
- 19 Take care not to scratch the soleplate – avoid buttons, zips, etc.
- 20 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.
- 21 Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- 22 If the cable is damaged, return the iron, to avoid hazard.

household use only

before using for the first time

- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.

auto shut-off


- If the iron is motionless, the element will switch itself off after about 30 seconds with the soleplate down or on its side, or about 10 minutes if it's upright.
- The iron will beep, the display will flash, and the indicator will revert to STAND-BY.
- To use the iron again, lift it up, tilt it forward, then sit it upright till it returns to its operating temperature (20-40 seconds, depending on the setting)
- No settings are lost during auto shut-off.

preparation

- 1 Check for textile care symbols (☒ ☒ ☒ ☒).
- 2 Iron fabrics needing low temperatures ☒ first, then those that need medium temperatures ☒, and finish with those needing high temperatures ☒.

filling (#2)

- 3 You may use the iron with tap-water, but if you live in a hard water area, you should use distilled water (not chemically descaled or softened water).
- 4 If you buy distilled water, check that it's marketed as suitable for use in irons.
- 5 Unplug the iron.
- 6 Slide the water inlet cover down, to open it.
- 7 Tilt the front of the iron upwards about 45 degrees.
- 8 Pour water from the jug into the water inlet.
- 9 Don't fill past **max**, or water will escape in use.
- 10 Wipe up any spillage.

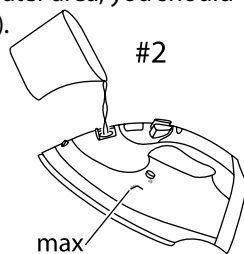


switch on

- 11 Sit the iron on its heel, on the ironing board.
- 12 Put the plug into the power socket (switch the socket on, if it's switchable).

set the temperature (#3)

- 13 Use the + and – temperature controls to move the indicator bar through the settings: STAND-BY, SYNTHETIC, SILK, WOOL, COTTON, LINEN. (STAND-BY = element turned off, LINEN = max temperature)
- 14 The display glows green and the indicator bar flashes, to show that the iron has not reached the set temperature.
- 15 When it reaches the set temperature, the iron beeps, the display turns blue, and the indicator bar stops flashing.

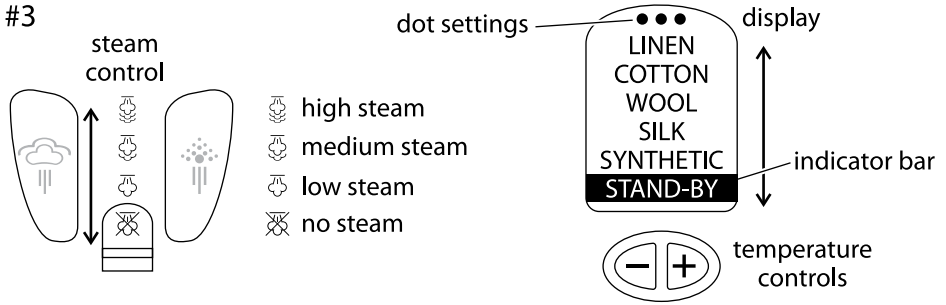

temperature setting guide

label marking	temperature dot setting	display
cool – nylon, acrylics, polyester	•	SYNTHETIC WOOL
warm – wool, polyester mixtures	••	SILK
hot – cotton, linen	•••	COTTON LINEN
do not iron		

* If the instructions on the fabric label differ from this guide, follow the instructions on the label.

reducing temperature


- 16 Reducing the temperature takes a bit longer, as the element has to lose the heat it has built up, so be patient. It's best to organise your ironing so that you don't need to reduce the temperature ("**preparation**" page 3, point 2).
- 17 When you reduce the temperature setting, the display will also glow green and flash. It'll stop flashing, beep, and change to blue when it reaches the set temperature.
- 18 Wait till it changes to blue, then carry on ironing.

steam ironing

- 19 When steam ironing, you must set the temperature control at COTTON or higher (#3).
- 20 If you don't, you'll get water on your clothes, not steam.
- 21 Check that there's water in the reservoir.
- 22 Slide the steam control to the level you want (= no steam, = maximum).
- 23 Wait till the display turns blue, then start ironing.

spray

- * Water spotting affects some fabrics. Test this on a hidden part of the fabric.
- 24 Check that there's water in the reservoir.
 - 25 Lift the iron off the fabric.
 - 26 Aim the spray nozzle at the fabric, and press the button.
 - 27 You may initially have to press it 2 or 3 times to pump water through the system.

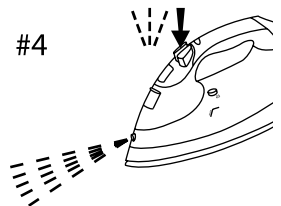


shot of steam

28 Don't Use the shot of steam function at temperatures below COTTON on the display.

At lower temperatures, you'll only get water spotting.


29 Check that there's water in the reservoir.

30 Lift the iron off the fabric

31 Press the  button.

32 You may initially have to squeeze 2 or 3 times to pump water through the system.


33 Leave 4 seconds between shots, to let the temperature build up.

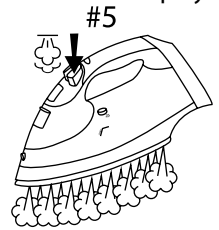

dry ironing

34 If you intend to dry iron for more than a few minutes, it's best to empty the reservoir first, to avoid spontaneous bursts of steam:

- Unplug the iron.
- Hold it over a sink or basin.
- Flip the water inlet cover open.

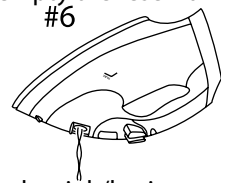

caution the water may be hot.

- Carefully, turn the iron upside down, and empty the water into the sink/basin.
- Wipe any spillage off the iron before use.

35 Set the temperature.

36 Wait till the display turns blue, then start ironing.

vertical steaming

37 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.

38 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

39 Check that there's nothing behind the fabric that may be damaged by the steam.


40 Check that pockets, turn-ups, and cuffs are empty.

41 Check that there's water in the reservoir.

42 Set the temperature to LINEN.


43 Wait till the display turns blue.

44 Hold the iron close to (but not touching) the fabric.

45 Press the  button (you're using the "shot of steam" function vertically).

46 You may have to squeeze 2 or 3 times to pump water through the system.

47 Leave 4 seconds between shots, to let the temperature build up.

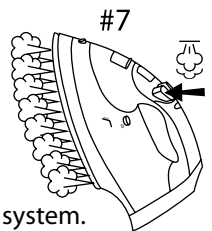

after use

48 Unplug the iron.

49 Hold it over a sink or basin.

50 Flip the water inlet cover open.

caution the water may be hot.

51 Carefully, turn the iron upside down, and empty the water into the sink/basin.

52 Sit the iron on its heel, and leave it to cool down completely.

53 When it's cold, wipe off any moisture, and wind the cable round the heel.

54 Store the iron on its heel, to avoid corrosion and damage to the soleplate.



self clean

55 To prevent scale building up, use the self clean function regularly, at least monthly in normal water areas, more often in hard water areas.

56 You'll need a basin or a large bowl to catch the water coming out of the soleplate.

57 Fill the reservoir to the **max** mark.

58 Sit the iron on its heel.

59 Put the plug into the power socket (switch the socket on, if it's switchable).


60 Set the temperature to LINEN.

61 Wait till the display turns blue.

62 Hold the iron over the basin or bowl, with the soleplate down.

63 Press the self clean button, and hold it down.

64 Gently move the iron to and fro, over the basin or bowl.

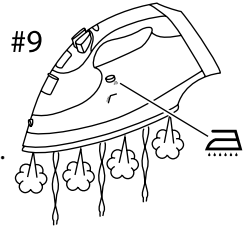

caution keep clear of the escaping water and steam

65 The water and steam will wash scale out through the soleplate.

66 When the reservoir is empty, release the self clean button.

67 Unplug the iron, and sit it on its heel to cool.

68 When it's cold, wipe off any moisture, and wind the cable round the heel.

69 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

anti-scale

70 The anti-scale agent incorporated in the iron helps prevent the build-up of scale.

71 Don't use a descaling solution, or you'll destroy the anti-scale agent.

cleaning

72 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.

73 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

74 Remove spots from the soleplate with a little vinegar.

75 Take care not to scratch the soleplate.

76 Don't put the iron in water or any other liquid.

77 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Salton Europe Ltd, Failsworth, Manchester M35 0HS

email: service@saltoneurope.com

telephone: 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products

