




# Russell Hobbs



instructions

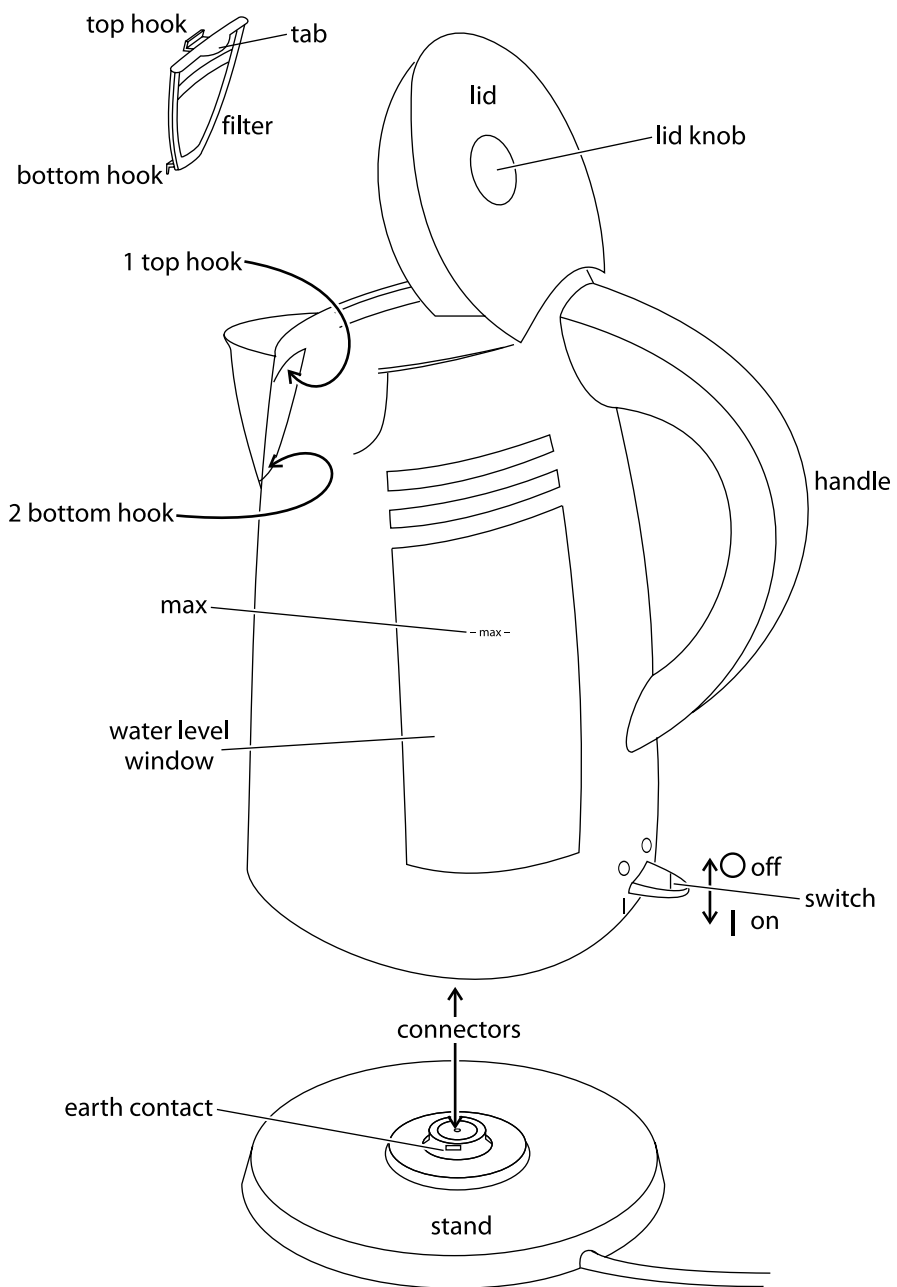



Read the instructions and keep them safe.

If you pass the kettle on, pass on the instructions too.

Remove all packaging, but keep it till you know the kettle works.

## **important safeguards**

Follow basic safety precautions, including:

- 1 This kettle must only be used by or under the supervision of a responsible adult.
- 2 Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Don't touch hot surfaces. Use the handle.
- 4 Don't use the kettle without the filter in place – it may spit boiling water – it may not switch off.
- 5 Don't open the lid while the water is heating.
- 6 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 7 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 8 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 9 Wind excess cable beneath the stand.
- 10 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 11 Check the lid is fully closed before switching the kettle on, otherwise it may not switch off.
- 12 Check the kettle is properly located on the stand before switching on.
- 13 Don't switch on unless the kettle contains at least 2 cups of water.
- 14 Don't fill past max, or it may spit boiling water.
- 15 Check that the kettle has switched off automatically, or move the switch to , to switch it off manually, before removing it from its stand.
- 16 Remove the kettle from its stand before filling or pouring.
- 17 Keep the kettle, stand, cable, and plug away from sources of heat.
- 18 Don't use the kettle for any purpose other than heating water.
- 19 Use the kettle only with the stand supplied (and vice versa).
- 20 This kettle must not be operated by an external timer or remote control system.
- 21 Don't operate the kettle if it's damaged or malfunctions.
- 22 If the cable is damaged, the kettle must be returned, in order to avoid hazard.

## **household use only**

### **before using for the first time**

- 1 Fill to max, boil, discard the water, then rinse it out, to remove manufacturing dust, etc.

### **positioning**

- 2 Put the stand on a stable, level surface. Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 3 Wind excess cable beneath the stand

## **filling**

**warning** keep clear, steam may escape from the lid.

- 4 Remove the kettle from the stand.
- 5 Press and release the lid knob – the lid will spring open.
- 6 Fill with at least 2 cups of water, but not above max.
- 7 If you overfill, the kettle may spit boiling water.
- 8 Close the lid, and press down to lock it.
- 9 Check the lid is closed, or the kettle won't switch off when it boils.

## **switching on**

- 10 Plug the stand into the wall socket.
- 11 Put the kettle on the stand – take care not to spill.
- 12 Move the switch to |.
- 13 The lights inside the kettle will come on, and the kettle will heat up.
- 14 The water level windows will change colour as the water temperature rises.

## **switching off**

- 15 When the water boils the kettle will switch off and the lights will go out.
- 16 To switch off manually, move the switch to ○.
- 17 Lifting the kettle off the stand will also switch the kettle off.
- 18 The water level windows will change colour as the water cools.

## **general**

- 19 Remove the kettle from the stand before pouring.
- 20 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 21 Don't tilt the kettle backwards, water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 22 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch the kettle off, which then condenses and escapes via vents under the kettle.
- 23 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

## **using with insufficient water**

- 24 This will shorten the life of the element.
- 25 A boil-dry cut-out will switch the kettle off.
- 26 To prevent the kettle cycling on and off, remove the kettle from the stand and let it cool before replacing it on the stand.
- 27 Don't fill the kettle till it's cold, or it may spit.

## **care and maintenance**

- 1 Check that the kettle is switched off – move the switch to ○.
- 2 Unplug the stand from the wall socket, and let the kettle cool before cleaning.
- 3 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 4 Keep all connectors dry.
- 5 Don't put the kettle or stand in any liquid.
- 6 Don't use harsh or abrasive cleaning agents or solvents.

## **descale regularly – even in soft water areas**

- 7 Limescale may be white, coloured, even rusty-looking, but it's normally visible.
- 8 Phosphate scale isn't generally visible, but it's there, even in soft water areas.
- 9 All scale causes overheating, reduces the kettle's life, and may trigger the boil-dry cut-out.
- 10 So, even with soft water, descale regularly, to help keep your kettle in working order.
- 11 Use a descaler suitable for plastic products (all kettles have plastic parts).
- 12 Follow the instructions on the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.
- ✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.

## **water filter**

- 13 Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

## **cleaning the filter**

- 14 Check your hands are free from soap, or anything which might leave a taint.
- 15 Switch the kettle off, and let it cool.
- 16 Open the lid.

## **release the filter**

- 17 Empty the kettle, as the filter will fall into the kettle when you release it.
- 18 Curl your hand round the top of the rim, above the filter, to get your fingertips under the tab on top of the filter.
- 19 Pull the tab up, to free the bottom hook, then let go – the filter will fall into the kettle.
- 20 Turn the kettle upside down, to tip out the filter.
- 21 Rinse the filter under a running tap while brushing with a soft brush.
- 22 Rinse the kettle, in case scale particles have fallen inside.

## **replace the filter**

- 23 Lower the filter into the kettle, then raise it to engage the top hook.
- 24 Hold it in position, and press the bottom hook firmly against the inside of the body, till it clicks into place.
- 25 Close the lid.
- 26 Give the kettle a good shake, to check that the filter is locked in place.

**warning** don't use the kettle without the filter in place – it may spit boiling water – it may not switch off.






## connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

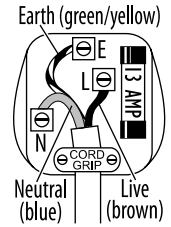

## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

### Customer Service

(correspondence only)  
Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS

### Customer Returns

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))  
telephone 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.