



CLEAN AIR MINI AROMA AIR PURIFIER



Russell Hobbs

A BRITISH ICON SINCE 1952

RHAP1032WDW-AU

Operating Manual

russellhobbs.com.au

russellhobbs.co.nz

CONTENTS

Section	Page(s)
Safety Instructions and Electrical Safety	3-5
Air Purifier Feature Diagram	6
Assembly and Filter Installation	7
Operating Instructions	8
Important Operating Instructions	8-9
Problem Solving and Recycling	10
Customer Service & Warranty	11-12
Notes	13-15
Specifications	16



Read this guide carefully before installing or operating your new appliance and keep it somewhere safe for future reference.

SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or adaptor. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate this appliance for anything other than its intended use.
- Cleaning and user maintenance should not be made by children without supervision.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.

SAFETY INSTRUCTIONS

- **WARNING:** The appliance is only to be used with the power adaptor provided with the appliance.
- Do not use if it has been dropped, damaged, left outdoors or dropped into water.
- Do not use if there are any visible signs of damage to the appliance.
- Keep the appliance away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces. Do not unplug by pulling on cord.
- To protect against electrical shock do not immerse cord, adaptor, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Ensure appliance is on a flat, stable, surface.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all of the air vents of the appliance are clear and there is no restriction of air flow.
- **CAUTION:** Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.

 
ELECTRICAL SAFETY

- Before switching on, ensure that your electricity supply matches the input voltage specified on the power adaptor rating label.
This product operates on 12V DC and must be used only with the supplied power adaptor rated 100–240V AC, 50-60Hz. Connection to any other power source or use of an incompatible adaptor may damage the unit.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.




Not to be used by children under 3 years old

AIR PURIFIER FEATURE DIAGRAM

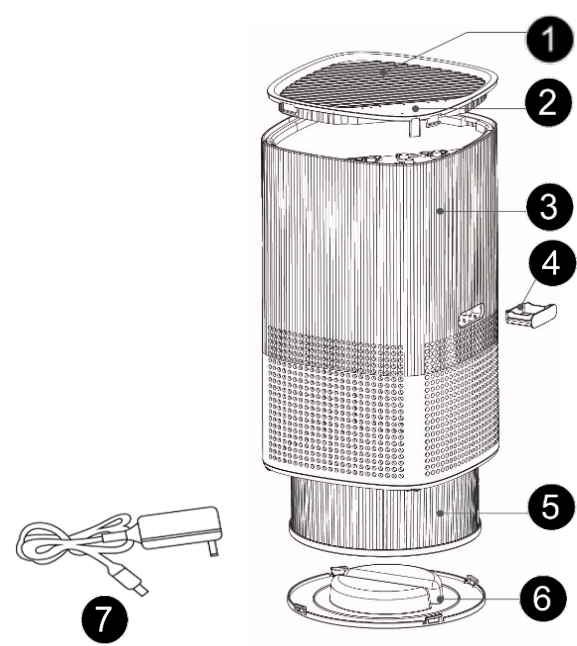

 - 1. Air Outlet
- 2. Control Panel
- 3. Casing
- 4. Aroma Pad
- 5. Filter
- 6. Base cover
- 7. Plug Adaptor

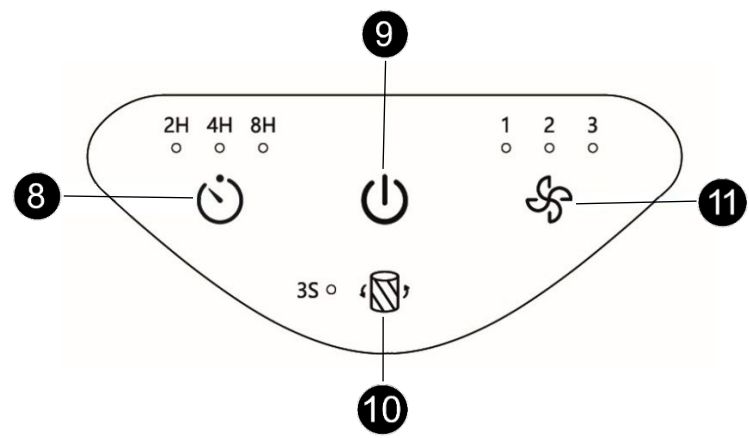


- 8. Timer
- 9. On/Off
- 10. Filter Change Indicator
- 11. Speed Setting

ASSEMBLY AND FILTER INSTALLATION

Your air purifier comes pre-assembled in the box, but you will need to remove the protective sleeve from the filter before use.

 - To change the filter, remove the base of the air purifier.
- Remove the old filter from the appliance.
- Take the new filter out of any protective sleeves or packaging.
- Install the new filter in the air purifier.
- Refit the base to the air purifier.

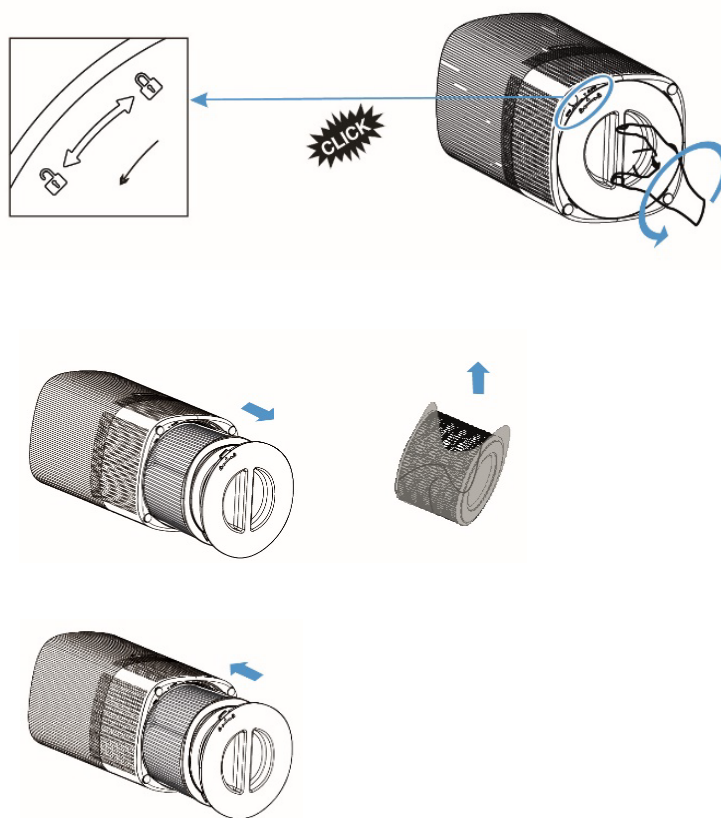

OPERATING INSTRUCTIONS

Press the Power button to switch on the Air Purifier. It will emit a beep and the machine will begin operating.



To turn off the appliance, press the Power button again and the lights & purifier will turn off.

During operation, press the timer button to select between 2 hours, 4 hours, 8 hours, or TIMER OFF.



IMPORTANT OPERATING INSTRUCTIONS

When the air purifier is switched on, press the Fan Speed button to control the operating speed. The purifier operates in low, middle, and high speed settings.



Your air purifier has a memory function, so if the purifier is switched off/on it will resume the previously selected speed.

When the filter change indicator light turns on, check whether the filter needs to be cleaned or replaced.



IMPORTANT OPERATING INSTRUCTIONS

Note: The filters' lifetime is based on your house air quality and the time it is in use. Using the appliance in a humid environment will reduce the lifetime of the filter. The filter lifetime should be reset if it lights up. After replacing the filter, you need to reset the filter lifetime.

 
For optimal performance, we recommend that you replace the filters in your air purifier every 6 months. Always use original manufacturer parts to ensure the best results.

After changing the filter, you can clear the warning light by pressing and holding the On/Off button for 3 seconds.

Aroma Pad

Your air purifier has an aroma pad that allows you to add a few drops of essential oil fragrances (not supplied) to gently diffuse into the air. Press the aroma pad seat on the side of the appliance and it will pop out.

Sparingly add a few drops of fragranced oil, and re-insert into the appliance. The pad can be rinsed with warm water, or replacement pads are available. We recommend replacing at least every month.

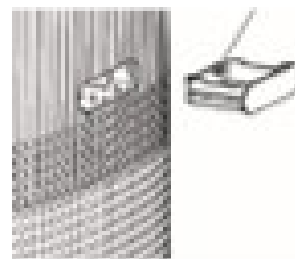

PROBLEM SOLVING

The air purifier doesn't switch on	• Check the appliance is plugged in • Check the socket is switched on • Check if there is another appliance in the socket • Unplug and check for any obvious signs of damage to cord or adaptor • If there is frost on the surface, allow to defrost • If recently used, allow to cool for 1 hour then try again
The air purifier is rattling	• Check the filter and base is secured properly • Check there is nothing in contact with the air purifier
Unusual/Grinding sound	• Immediately switch off and contact Customer Services
Light hasn't turned on	• Check the appliance has switched on as first solution above • Press the Power Button • Hold the Power Button for 3 seconds • Press the light button
The air smells or is dusty	• Check the filter is properly installed • Ensure filter is clean and free from dust • The filter can be lightly brushed or vacuumed to remove dust. Do not wash with water • Replace filter with a new filter

RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery-operated appliances, please contact your local council or your local household waste disposal service.

CUSTOMER SERVICE & WARRANTY

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

Toll Free: 1800 623 118
Email: consumer.enquiry@russellhobbs.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776
Email: info@russellhobbs.co.nz
Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

- for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
- for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorized distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
- We warrant the Goods for all parts defective in workmanship or materials for a period of 2 years from the date of purchase (Warranty Period).

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

WARRANTY CONDITIONS

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
 - a) Retain this warranty with your receipt/proof of purchase; and
 - b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
 - a) Any serial number or appliance plate is removed or defaced;
 - b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
7. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

REGISTER YOUR PRODUCT ONLINE

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit: <https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit: <https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

NOTES

NOTES

NOTES

SPECIFICATIONS

Model Number	RHAP1032WDW-AU
Rated Input	12V DC, 1A
Power Supply (Adaptor)	Model: GQ12-120100-AA Input: 100–240V AC, 50-60Hz Output: 12V DC, 1A
Power Consumption	1.4W (Setting 1) 3.5W (Setting 2) 8.4W (Setting 3)
Filter Part Number	SP-RHAPFILT-1032
Aroma Pad Part Number	SP-RHAPPAD-1032

BEAUTIFULLY BRITISH IDEAS

SINCE



1952