





Russell Hobbs

A BRITISH ICON SINCE 1952


RHC2766

  www.russellhobbs.com.au
www.russellhobbs.co.nz

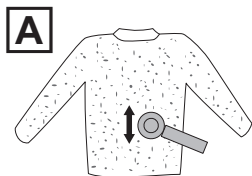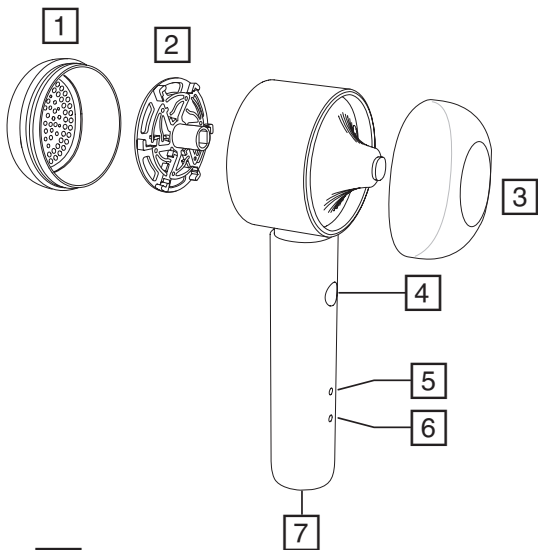


3

 
B

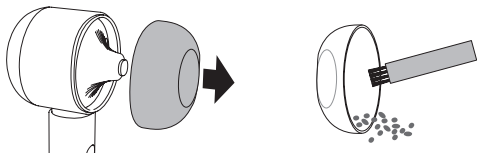

C

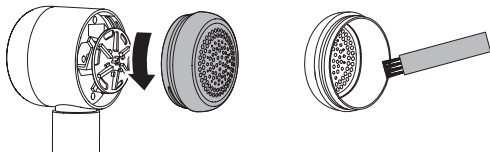 

D

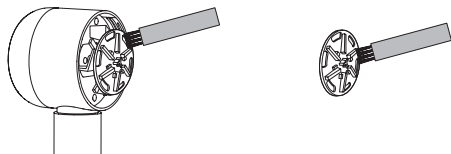 

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance or any other part if it is damaged or has malfunctioned as this may cause injury.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use the appliance with a damaged cord. A replacement can be obtained via our customer service centres.
- The battery in this device is not replaceable.
- **WARNING:** Keep the appliance dry.
- Unplug the charging cable immediately after fully charging.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Russell Hobbs.
- Never drop or insert any object into any opening of this appliance.

HOUSEHOLD USE ONLY

PARTS

- | | |
|--------------------------------|----------------------|
| 1. Shaving foil | 7. Charging port |
| 2. Cutter | Not shown : |
| 3. Lint catcher | • Brush |
| 4. On/off button | • USB charging cable |
| 5. Travel lock indicator light | |
| 6. Power indicator light | |

CHARGING

When the battery is low, the white power indicator light flashes, indicating that you need to charge the shaver.

1. Ensure that your fabric shaver is switched off before charging.
2. Connect the USB charging cable to the charging port. Connect the other end of the cable to a powered USB port.
3. Your fabric shaver takes about 3 hours to charge. The white power indicator light will flash while charging. When fully charged, the light will stop flashing and stay lit.
4. Disconnect the charging cable once the shaver is fully charged.

OPERATION

IMPORTANT: Your fabric shaver is delivered with the travel lock enabled and may not switch on when you press the on/off button. Disable the travel lock before first use. See TRAVEL LOCK.

- CAUTION: Your fabric shaver may not be appropriate for use on all types of fabrics. Using it on delicate fabrics such as angora wool, or fabrics of a "textured" or raised knit design may damage or alter these fabrics. We recommend first testing your shaver on an unnoticeable section of fabric. Use light strokes - do not press into the garment.
 - NOTE: This product should not be used on down or feather clothing.
 - Should performance decrease, check the battery power and clean the unit by emptying the lint catcher.
 - Prior to use, inspect the fabric carefully to ensure you do not shave off pulls in the fabric.
 - Don't use your fabric shaver around buttons, zippers, decorative pieces, foreign matter stuck to clothing, clothing interface and seams, and thin or easy to tear areas.
1. Lay the garment smoothly on a flat surface. When trimming thin clothing, fold it into double layers and place it on an ironing board before trimming.
 2. Press the on/off button and lightly stroke the shaver back and forth over the garment (fig. A). Do not apply any pressure - only use the weight of the unit. You will quickly notice the pills and fuzz being removed and drawn into the lint catcher.
 3. After you have completed each individual garment, wipe off all residue on the unit and shaving head so you do not transfer it onto the next garment.

TRAVEL LOCK

Your fabric shaver has a travel lock to avoid it being accidentally switched on during storage or travel.

To enable the travel lock: With your fabric shaver turned off, press and hold the on/off button for 3 seconds. The travel lock indicator light will flash three times and turn off. Your shaver is now locked.

To disable the travel lock: Press and hold the on/off button for 3 seconds. Your fabric shaver will switch on and the travel lock will be switched off.

CLEANING AND CARE

To maintain the best performance of your fabric shaver, clean it after each use. Do not submerge it in water. Wipe using a damp cloth. Handle the cutter with care so as not to damage the blades.

To Clean:

1. With the unit turned off, gently remove the lint catcher by pulling it outwards (fig. B). It is held in place with magnets. Discard the contents and clean it with the cleaning brush. Don't allow the lint catcher to become more than three quarters full.
 2. Re-attach the lint catcher.
 3. Next, remove the shaving foil by turning it counter-clockwise. Clean any lint from inside the shaving foil (fig. C).
 4. Gently pull out the cutter. Use the brush to remove any lint remaining inside the area where the cutter is located, and from the cutter (fig. D).
 5. When finished cleaning, refit the cutter into the housing and then the shaving foil. Turn clockwise to tighten by hand.
-

STORAGE

When not in use store out of reach of children in a safe, dry location.

BATTERY REMOVAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life, before it is discarded.

- The product contains an INR: Lithium Nickel Manganese Cobalt Oxide battery. Once the product has reached the end of its life, to ensure proper disposal, please take the product to a recycling centre where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not mutilate or put batteries in the fire as they may burst resulting in injury. Do not short circuit as it may cause burns.

Use local waste management centres to recycle this product at end of life.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd

Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replacement parts are used.
7. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

Spectrum brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in Australia

TollFree: 1800 623 118
Email: info@spectrumbrands.com.au
Website: www.russellhobbs.com.au

Customer Service in New Zealand

TollFree: 0800 736 776
Email: info@spectrumbrands.co.nz
Website: www.russellhobbs.co.nz

