



FRESH AIR PRO 2 IN 1 AIR PURIFIER & DEHUMIDIFIER



Russell Hobbs

A BRITISH ICON SINCE 1952

RHDH1101WDW-AU

Operating Manual

russellhobbs.com.au

russellhobbs.co.nz

CONTENTS

Section	Page(s)
Safety Instructions and Electrical Safety	3-5
Product Feature Diagram	6
Assembly	6
Full Water Tank Warning	6
Installing the Filter	6-7
Operating Instructions	7
Emptying the Water Tank	7
Problem Solving and Recycling	8
Customer Service & Warranty	9-10
Notes	11
Specifications	12



Read this guide carefully before installing or operating your new appliance and keep it somewhere safe for future reference.

SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance
- Do not operate this appliance for anything other than its intended use.
- Cleaning and user maintenance should not be made by children without supervision.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- The appliance shall be installed and operated in accordance with national wiring regulations.
- The ratings for the fuse on the PCB is T 2A.

SAFETY INSTRUCTIONS

- Do not use if it has been dropped, damaged, left outdoors or dropped into water.
- Do not use if there are any visible signs of damage to the appliance.
- Keep the appliance away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces. Do not unplug by pulling on cord.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Ensure appliance is on a flat, stable surface.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all of the air vents of the appliance are clear and there is no restriction of air flow.
- CAUTION: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.

 
ELECTRICAL SAFETY

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 100–240V AC; 50/60Hz. Connection to any other power source may damage the unit.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.



Not to be used by children under 3 years old

PRODUCT FEATURE DIAGRAM

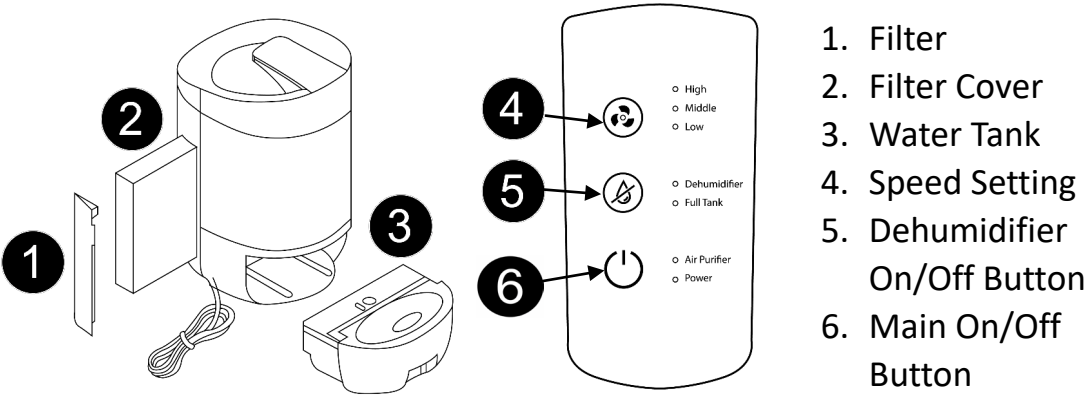

ASSEMBLY

- Check the Water Tank [3] is correctly installed and does not have any packaging inside.
- Place the Water Tank [3] into the product.
- Plug into a Mains Plug Socket.
- Power on by pressing the On/Off Button [6].
- The light will illuminate the top section, and the Air Purifier is now operating.

 
To turn the Light Indicator on or off, press the On/Off button [6]. Press it again to switch the unit.

FULL WATER TANK WARNING

The water tank has a maximum capacity of 1000ml, and a maximum operating capacity of 750ml/day. When the Water Tank is full, the Light illumination will turn orange and flash, and the unit will stop operating.




INSTALLING THE FILTER

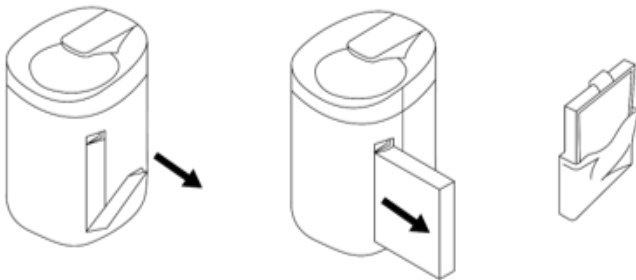

INSTALLING THE FILTER

 
Ensure filter is the correct direction when installing

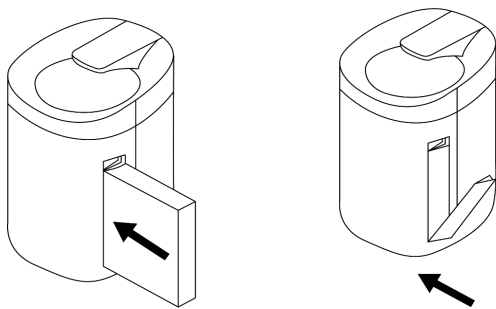


When the light flashes yellow, check whether the filter needs to be cleaned or replaced. Replacement may vary depending on the air quality in your home and can be judged by changes in air cleanliness before and after the light flashes. For optimal performance, it is recommended that the filter be replaced every 6 months. After changing the filter, reset the warning light by pressing and holding the Main On/Off button for 7 seconds. Always use original manufacturer parts to ensure the best results.

OPERATING INSTRUCTIONS

 Press the Power Button to turn on the Air Purifier. The light will then glow on the top section.

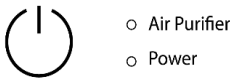

 Press the Power Button again to turn the light off but keep the Air Purifier working.

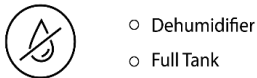

To begin dehumidification, press the Dehumidifier button.

 
To adjust the fan speed of the air purifier, press the Fan Speed button to select Low, Middle, or High-speed purification/dehumidification.



EMPTYING THE WATER TANK

Ensure the product is switched off at mains, and the plug is removed for safety.

Do not tilt the product when the tank is full.

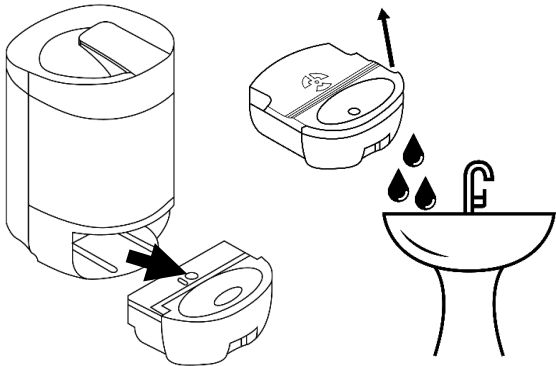

PROBLEM SOLVING

The product doesn't switch on	• Check if the water tank is full and empty if full. • Check the product is plugged in • Check the socket is switched on • Check if another appliance is in the socket • Unplug and check for any obvious signs of damage to cord or plug • If there is frost on the surface, allow to defrost • If recently used, allow to cool for 1 hour then try again
The product is rattling	• Check the water tank is secured properly • Check there is nothing in contact with the product
The product is making a grinding sound	• Immediately switch off and contact Customer Services
Light hasn't turned on	• Check the product has switched on as first solution above • Hold the On/Off Button for 3 seconds
Filter is clogged/air is musty	• You can clean the filter by lightly brushing or vacuuming, taking care not to damage it

RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery-operated appliances, please contact your local council or your local household waste disposal service.

CUSTOMER SERVICE & WARRANTY

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

Toll Free: 1800 623 118
Email: consumer.enquiry@russellhobbs.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776
Email: info@russellhobbs.co.nz
Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

- for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
- for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorized distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
- We warrant the Goods for all parts defective in workmanship or materials for a period of 2 years from the date of purchase (Warranty Period).

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

WARRANTY CONDITIONS

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
 - a) Retain this warranty with your receipt/proof of purchase; and
 - b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
 - a) Any serial number or appliance plate is removed or defaced;
 - b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
7. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

REGISTER YOUR PRODUCT ONLINE

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit: <https://au.russellhobbs.com/product-registration>

 
If you live in New Zealand, please visit: <https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

NOTES

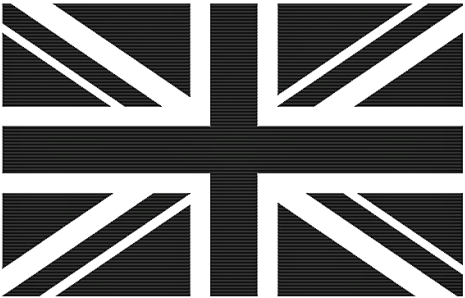SPECIFICATIONS	
Model Number	RHDH1101WDW-AU
Rated Voltage	100-240V~, 50/60Hz
Power Consumption	45W
Filter Part Number	SP-RHDHFILT-1101
BEAUTIFULLY BRITISH IDEAS SINCE  1952	