




Russell Hobbs®

A BRITISH ICON SINCE 1952



RHICM2875

www.russellhobbs.com.au
www.russellhobbs.co.nz

Before First Use

| | |
|---|--|
|  | Read the instructions and retain for future reference. |
|---|--|

Intended Use

| | |
|---|---------------------|
|  | Household use only |
|  | Do not use outdoors |

 
 
 
 
 
 
 
Specification

| | |
|-----------------------|---------------------|
| Power Rating (W) | 800 |
| Operating voltage (V) | 220-240, 50-60Hz |

Important Safeguards

WARNING: Potential injury from misuse.

- When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:
- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Children should be supervised to ensure they do NOT play with the appliance.
- Do not blend hot ingredients or liquids. Hot liquids/ingredients can create pressure and/or may be ejected during blending which may result in a possible scalding hazard.
- Children shall not play with the appliance.
- Do not leave the appliance unattended while plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and power cord out of reach of children or persons with reduced physical, sensory and mental capabilities.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away during operation to reduce the risk of injury and/or damage to the appliance.
- Turn the appliance off, then unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
- Ensure the appliance is off when fitting or removing the Bowl from the Base Unit.
- Always clean the appliance after use and follow the instructions when cleaning this appliance.

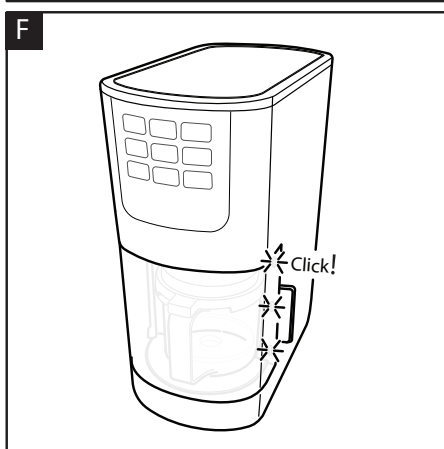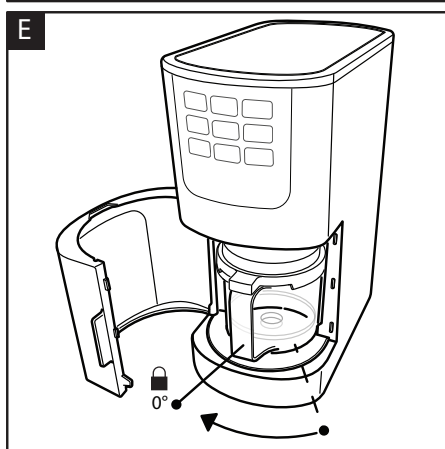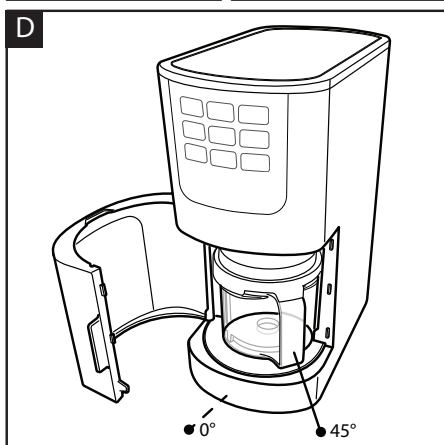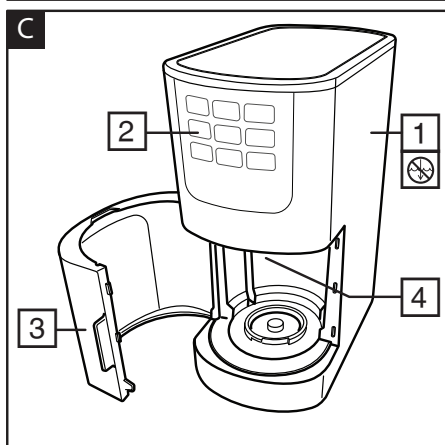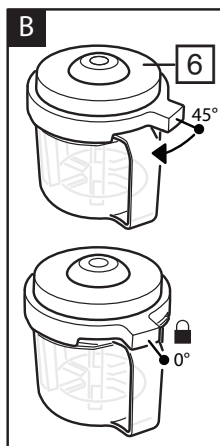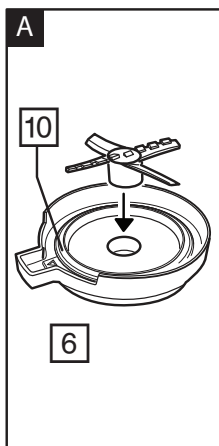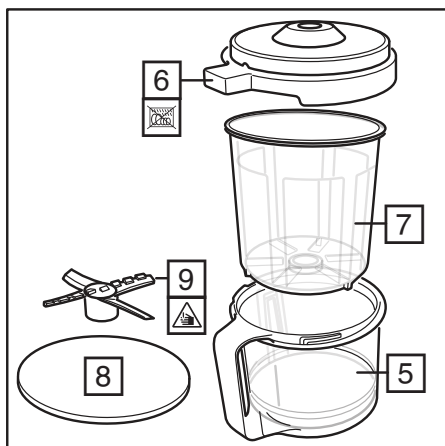

- To prevent possible damage to the appliance do not use harsh abrasive or alkaline cleaning agents.
- Care must be taken when handling any accessories with sharp edges. Cutting blades are very sharp. Handle with extreme care and caution when emptying the bowl, removing the blades from the bowl and during cleaning.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- farm houses.

Warning Symbol Glossary

| | |
|--|---------------------------|
| | Do not Immerse in water |
| | Use Caution. Sharp object |
| | Dishwasher Safe |

Parts List

| | | |
|------------------|------------------|--|
| 1 | Base Unit | |
| 2 | Control Panel | |
| 3 | Door | |
| 5 | Outer Bowl | |
| 6 | Outer Bowl Lid | |
| 7 | Dessert Tub | |
| 8 | Dessert Tub Lid | |
| 9 | Mixing Paddle | |
| 10 | Outer Lid Gasket | |
| Not Shown | | |
| 4 | Drive Shaft | |

Function Button Operation

When you press a Function button:

- The appliance starts the selected function.
- The LED for the selected function and the On/Off button both remain illuminated

| Auto Function Button | Use |
|-----------------------------|---|
| Ice Cream | Ice Cream from milk, or milk alternatives. |
| Light Ice Cream | Ice Cream with low sugar, fat or use sugar substitutes. |
| Gelato | Gelato with custard based ingredients. |

| | |
|-------------------|--|
| Sorbet | Fruit based, with water and sugar ingredients. |
| Yoghurt Ice Cream | Frozen yoghurt from store-bought yoghurt |
| Milkshake | Milkshakes. Combine Ice Cream and Milk. |
| Respin | To provide a smooth texture after running an Auto Function. Use the Respin function if the mixture is colder than -7°F. |
| Mix in | To mix small pieces cookies, nuts, cereal, or frozen fruit into the base. Use this Auto Function after the appliance has processed the base ingredients. |

Auto Function is canceled and the unit will return to its starting position.

Use

Note - If the recipe requires the ingredients to be frozen, add ingredients to Dessert Tub (7), cover with Dessert Tub Lid (8) and freeze for 24 hours.

1. Add ingredients to the Dessert Tub (7). Do not add ingredients past the MAX Fill Line on the Dessert Tub (7).

Important - Obey the MAX Fill Line for liquids and solids. For all Auto Functions except the Milkshake function, fill the container to the Spoonable Max level.

For the Milkshake function, use the Frozen Max level for frozen ingredients. Use the Liquid Max level for liquid ingredients in the Milkshake function.

2. When the base is prepared or frozen, remove the Dessert Tub Lid (8) and place the Dessert Tub (7) into the Outer Bowl (5).
3. Assemble the Mixing Paddle (9) to the Outer Bowl Lid (6). Refer to Fig (A).

Note - The Mixing Paddle (9) and the Outer Bowl Lid (6) each contain a magnet.

4. Attach the Outer Bowl Lid (6) to the assembled Outer Bowl (5). Refer to Fig (B).
5. Open the Door (3).
6. Place Bowl into the Base Unit (1). Refer to Fig (D).
7. Lock the Bowl to the centre

During Active Function

If you press a different Function button, The appliance stops the current function and starts the new one.

If the active Function button is pressed or the On/Off button, the appliance goes to the Function Pause Mode.

Function Pause Mode

When a function is paused:

- The selected Function and the On/Off LED flash repeatedly.
- If an Auto Function button is pressed, the appliance resumes operation with that Auto Function.
- If the On/Off button is pressed, the

- position at 0°. Refer to Fig (E).
8. Close the Door (3).
 9. Switch on at the mains outlet and press the Power Button.
 10. Select the desired function. The Auto Function will automatically stop when complete.
 11. Once the Auto Function is complete, open the Door (3) and remove the Outer Bowl (5) from the Base Unit (1) by rotating the Outer Bowl (5) counter-clockwise to unlock it. Refer to Fig (D) for position.
 12. Remove the Outer Bowl Lid (6) from the Outer Bowl (5) by rotating counter clockwise to unlock. Remove the Dessert Tub (7) from the Outer Bowl (5).

Use - Mix In

If adding Mix-in ingredients, use a spoon to create a 40mm wide hole that reaches the bottom of the mixture.

Add chopped or broken mix-ins to the hole and repeat respinteps 6-10 to process again using the **Mix In** Auto Function.

The Respin Auto Function can be used on crumbly ice cream to provide a creamy texture.

Use - Respin

Respin is often required for very cold bases. If the base is crumbly, repeat steps 6-10 to reprocess using the Respin Auto Function.

Standby Mode





If you do not press a button for 3

minutes, the unit will switch off.

Care and Cleaning

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off and unplugged from the mains outlet. Do not use abrasives or brushes to clean components. Do not place parts in boiling liquids. Do not immerse Base Unit (1) in any liquid.

Clean using a damp cloth and dry:

| | | |
|----------|---------------|---|
| 1 | Base Unit |  |
| 2 | Control Panel |  |
| 3 | Door |  |
| 4 | Drive Shaft |  |

Remove, clean and dry:

| | | |
|-----------|------------------|---|
| 5 | Outer Bowl |  |
| 6 | Outer Bowl Lid |  |
| 7 | Dessert Tub |  |
| 8 | Dessert Tub Lid |  |
| 9 | Mixing Paddle |  |
| 10 | Outer Lid Gasket |  |

Troubleshooting

If platform is obstructed, raise manually:

- Press and hold the ICE CREAM and SORBET buttons simultaneously for 5 seconds.
- The platform will raise.
- The platform will stop when buttons are released.

If platform is obstructed, lower manually:

- Push and hold the MIX IN and RESPIN buttons simultaneously for 5 seconds.
- The platform will lower.
- The platform will stop when buttons are released.

Appliance Error

In the event of an error, the appliance will beep three times and the On/Off button will flash.

- Check to ensure the Jar/Lid/Blade assembly is correctly installed, the door is closed, and the platform is in the correct position. If the error code persists, please contact customer service.
- If the platform is will not move, it can be raised or lowered by pressing and holding the ICE CREAM and SORBET buttons or the MIX IN and RESPIN buttons together for 5 seconds.

Recipes



Recipe sample - Milkshake

Ingredients:

- ½ cup milk
- 1/3 cup bananas

- ¼ cup oats
- 3 tablespoons honey
- ½ cup Greek yogurt
- ½ cup water

Preparation:

1. Mix ¼ cup oats with ½ cup water evenly and then heat it in a microwave until the oats become soft (about 1 minute).
2. After heating, add ½ cup Greek yogurt, 1/3 cup bananas, and 3 tablespoons of honey, and use a blender to mix them evenly.
3. Pour into the Inner Jar and freeze for 24 hours.
4. Add ½ cup milk and mix using the MILKSHAKE auto function.

Recycling

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Customer Services

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: consumer.enquiry@russellhobbs.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket

Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776

Email: info@russellhobbs.co.nz

Website: www.spectrumbrands.co.nz

Warranty

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
 2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;
- Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and
- You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the

Australian Consumer Law, or the CGA.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:

3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.

-
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
- (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
- (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the

ratings label located on the Goods.

11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.

12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Register your product

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit:

<https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit:

<https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

