





Russell Hobbs®


A BRITISH ICON SINCE 1952

RHJ2877

www.russellhobbs.com.au

   www.russellhobbs.co.nz

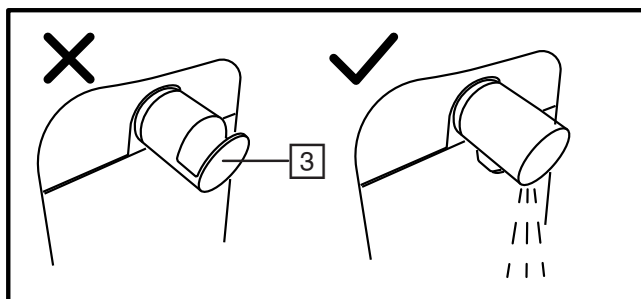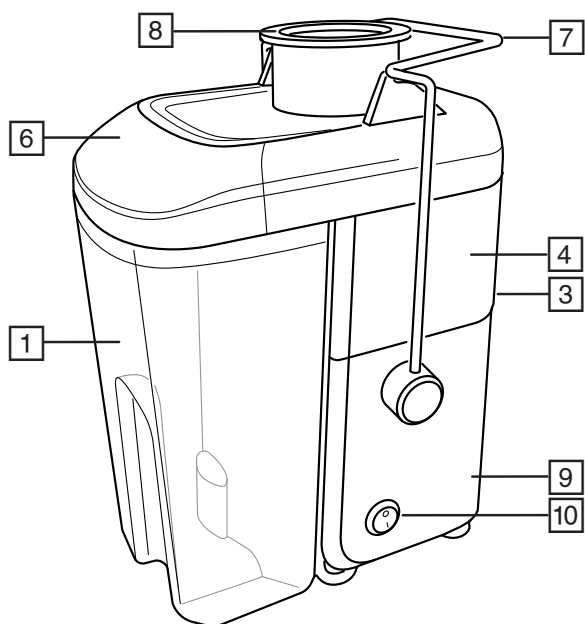

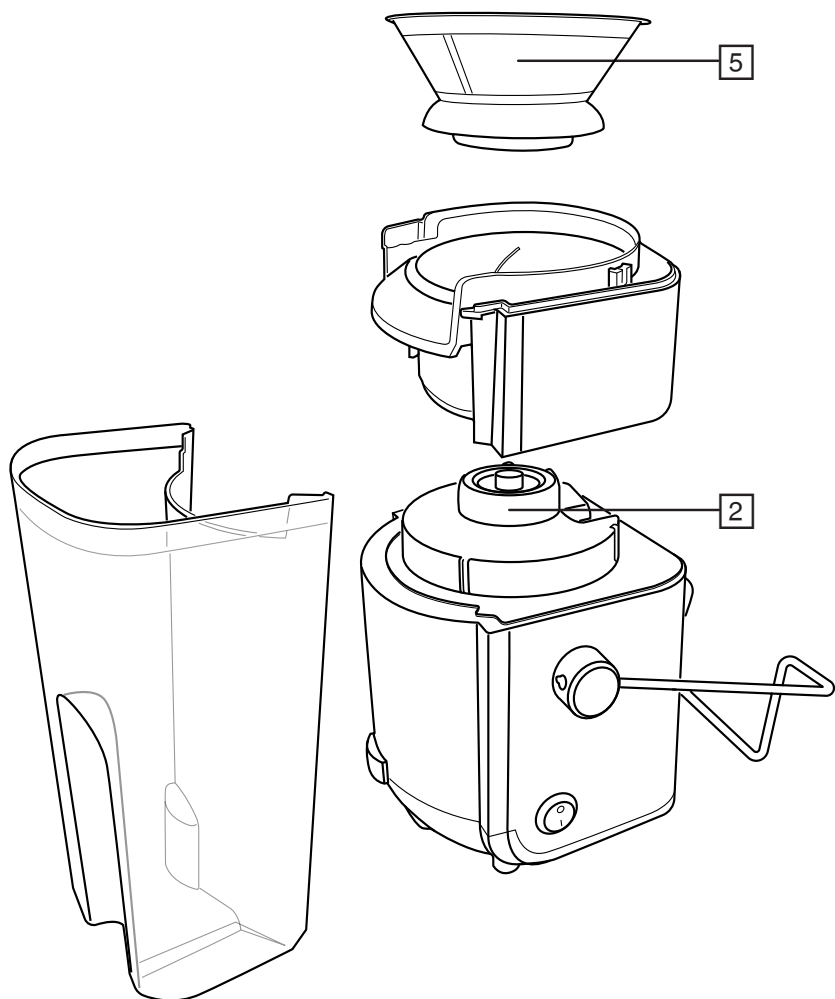

Before First Use

	Read the instructions and retain for future reference
	Wash the pulp container, sieve, lid, food pusher and separator and in warm, soapy water. Rinse and dry.

Intended Use

	Household use only
	Do not use outdoors

Important Safeguards

Follow basic safety precautions, including:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance should not be made by children.
4. Keep the appliance and power cord out of reach of children or persons with reduced physical, sensory and mental capabilities.
5. Always turn off and unplug from the power outlet if left unattended and before assembling, disassembling, approaching parts that move or cleaning.
6. Care shall be taken to avoid personal injury when handling the sharp cutting blades, emptying the bowl and during cleaning.
7. Keep hands and utensils away from moving blades to prevent the possibility of severe personal injury and/or damage to the appliance.
8. Be careful if hot liquid is poured into the food processor as it can be ejected without warning due to a sudden steaming.
9. Do not blend hot ingredients or liquids. Hot liquids/ingredients can create pressure and/or may be ejected during blending which may result in a possible scalding hazard.
10. Do not start the blender without the lid (and measuring cap) in place otherwise liquids/ingredients will be ejected. Always place your hand on top of the blender jug lid to hold the jug steady when the blender starts.
11. Do not operate this appliance for longer than 90 seconds when mixing heavy loads and allow 2 minutes rest between uses.
12. WARNING: Potential injury from misuse.
13. Do not use this appliance for other than its intended purpose.
14. Do not use accessories other than those supplied with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
16. Do not operate the appliance if it has been damaged or has malfunctioned.
17. Refer to the Care and Maintenance Section for cleaning instructions.
18. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - farm houses.

Warning Symbol Glossary

	Use Caution. Sharp objects.
	Do not immerse in water

Parts List

1	Pulp container	
2	Drive shaft	
3	Spout	
4	Separator	
5	Sieve	
6	Lid	
7	Latch	
8	Pusher	
9	Motor Unit	
10	On/Off Switch	
Not Shown		
11	Brush	

Assembly

- Place the:

1	Pulp container	
---	----------------	---

alongside the:

9	Motor Unit	
---	------------	---

- Fit the:

4	Separator	
---	-----------	--

onto the:

9	Motor Unit	
---	------------	--

- Place the:

5	Sieve	
---	-------	--

into the:

4	Separator	
---	-----------	--

and push down onto the:

5	Sieve	
---	-------	--

to connect to:

2	Drive shaft	
---	-------------	--

- Fit the:

6	Lid	
---	-----	--

Over the:

4	Separator	
---	-----------	---

- Lock the:

7	Latch	
---	-------	--

over the rim of the:

6	Lid	
---	-----	--

To the Lock position.

- Place the:

8	Pusher	
---	--------	--

into the:

6	Lid	
---	-----	---

Use

- Ensure the appliance is switched off.
- Plug into the mains socket.
- Place a jug under the:

3	Spout	
---	-------	---

- Remove the:

8	Pusher	
---	--------	---

Place ingredients down the tube.

- Replace the:

8	Pusher	
---	--------	---

and use it to push the ingredients gently down the tube.

Do not run the motor continuously for more than 2 minutes, it may overheat. After 2 minutes switch off and allow the appliance to rest for at least 2 minutes.

Tips

- Use fresh, ripe fruit and vegetables. It is not recommended to use soft and overripe fruit. Use blender instead. Harder fruit and vegetables are recommended.
- Wash all fruit and vegetables. Use a brush on the harder ones. Remove the outer leaves on non-organic produce. Peel any non-organic or waxed fruit or vegetables. Cut out and discard bruises and blemishes as these may affect the taste of the juice.
- Trim fruit and vegetables so they will go through the tube. Use the pusher to push

down the last bits of fruit, and to push down carrots, celery and other long fruit and vegetables.

- Bunch up leafy greens, parsley, wheat grass and beansprouts into a small tight ball and push it down the tube with the pusher.
- All fruits with stones must be pitted before juicing.

Cleaning & Maintenance

- Switch off the appliance and unplug from the mains.
- Dissassemble the appliance using the assembly process in reverse order.

Clean using a damp cloth and dry:

10	Motor Unit	
----	------------	--

Remove, clean and dry:

1	Pulp container	
3	Spout	
4	Separator	
5	Sieve	
6	Lid	
8	Pusher	

- If the:

5	Sieve	
---	-------	--

is clogged, hold it under a running tap and use the:

11	Brush	
----	-------	--

Brush along the surface of the mesh with a nylon washing up brush. Do not push the bristles through the mesh.

Disposal/Recycling

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Customer Services

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: consumer.enquiry@russellhobbs.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776

Email: info@russellhobbs.co.nz

Website: www.spectrumbrands.co.nz

Warranty

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or

2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:

3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own

discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.

5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.

6. The warranty granted under clause 3 is limited to repair or replacement only.

7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:

- (a) Retain this warranty with your receipt/ proof of purchase; and
- (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with
 - (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:

(a) Any serial number or appliance plate is removed or defaced;

(b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.

10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.

11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.

12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Register your product

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit: <https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit: <https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

